



Electric Rotating Bracket Operation Manual

Please note, this bracket with a function: configuration will not be lost after power off, means when the bracket is working of a scan action, but the power is off, then when you reboot the bracket, it will continue the action before power off.

1. Set address code of bracket:

User need to set the address code of this bracket before use it, address code can be set of 01 - 10, each bracket only can use 1 address code, default address code is "01".

Steps of set address code as follows:

- (1) Enter setting status: set preset of NO.25.
- (2) Start to set address code (e.g. Set add NO.02): press "set preset" on keyboard, then type the address number of " 02 ", then press key of "ENTER" to confirm the set.
- (3) Change address code of control keyboard: because now the bracket use the address code as "02", so you need to change your control keyboard to use address code of "02" to control the bracket.
- (4) Save the address code of bracket: after you change the control keyboard's address code, now please SET preset of NO.26, and save this command, then reboot the bracket. (if you don't do this step to save address code, the bracket will bact to the 01 address code after reboot.)

2. Limiting Scan:

Set left limiting position: set preset of NO.09.

Set right limiting position: set preset of NO.10.

Run limiting scan: run / go preset of NO.12.

Delete limiting scan: set preset of NO.12.

Set scan speed: can set 3 levels, 10°/ sec; 18°/sec; 25°/sec.

Command: set preset of NO. 15 ; NO. 16 ; NO. 17.

3. Tour scan:

This bracket can set 1 tour scan route, can set 8 preset position in 1 tour scan.

Run tour scan: run / go preset of NO.13.

Delete tour scan: set preset of NO.13.

After the bracket run tour scan for 50 times, it will auto back to the initial position for check positions.

User also can manual adjust it to do this check.


Manual check initial position: run / go preset of NO.18.

4. Back to factory set: set preset of NO.20.

P.S. Use our keyboard to SET preset / RUN preset steps:

press "SET PRE" / "GO PRE" -- press number keys -- press "ENTER".

Analog Camera Connection Diagram

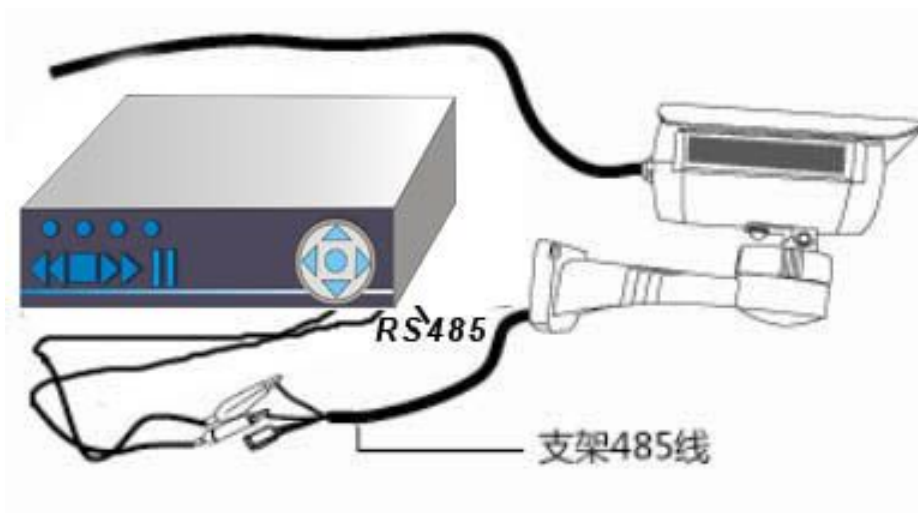

Or



Connect with IP Camera with rs 485 cable

