

---

# **H series DVR User's installation and operation Manual**

## **Edition R1.0**

### **Welcome**

**Thank you for purchasing our DVR!**

**This manual is designed to be a reference tool for the installation and operation of your system. Here you can find information about this series DVR features and functions, as well as a detailed menu tree.**

**Before installation and operation please read the following safeguards and warnings carefully!**

### **Important Safeguards and Warnings**

**Do not place heavy objects on the DVR.**

**Do not let any solid or liquid fall into or infiltrate the DVR.**

**Please brush printed circuit boards, connectors, fans, machine box and so on regularly. Before the dust cleaning please switch off the power supply and unplug it.**

**Do not disassemble or repair the DVR by yourself. Do not replace the components by yourself.**

### **Environment**

**Please place and use the DVR between 0°C and 40°C. Avoid direct sunlight. Stay away from heat source.**

**Do not install the DVR in damp environment.**

**Do not use the DVR in smoky or dusty environment.**

**Avoid collision or strong fall.**

**Please insure the DVR level installation in a stable workplace.**

**Please install in ventilated place. Keep the vent clean.**

**Use within the rating input and output scope.**

# Directory

2 Open-package check and cable connections.....	6
2.1 Open-package check.....	6
2.2 Hard disk installation.....	6
2.3 Front panel .....	7
2.4 Rear panel .....	8
2.5 Audio and video input and output connections .....	8
2.5.1 Video input connections.....	8
2.5.2 Video output connections and options.....	9
2.5.3 Audio signal input.....	9
2.5.4 Audio signal output.....	10
2.6 Alarm input and output connections .....	10
2.6.1 Alarm input port specification .....	11
2.6.2 Alarm output port specification.....	12
2.6.3 Alarm output port relay parameters .....	12
2.7 Speed dome connections.....	12
3 Basic operation.....	14
3.1 Turn on.....	14
3.2 Turn off.....	14
3.3 System Login .....	15
3.4 Preview.....	15
3.5 Desktop shortcut menu .....	16
3.5.1 Main menu.....	16
3.5.2 Playback .....	17
3.5.3 Record Mode.....	20
3.5.4 Alarm output.....	21
3.5.5 PTZ control.....	21
3.5.6 Color setting.....	27
3.5.7 Output Adjust.....	27
3.5.8 Logout.....	27
4 Main menu.....	29
4.1 Main menu navigation .....	29
4.2 Record.....	30
4.2.1 Record Config.....	30
4.2.2 Playback.....	32
4.2.3 Backup.....	32
4.3 Alarm Function.....	33
4.3.1 Motion Detect.....	33
4.3.2 Video Blind.....	36
4.3.3 Video Loss.....	37

4.3.4 Alarm input.....	37
4.3.5 Alarm output.....	38
4.3.6 Abnormal.....	38
4.4 System setup.....	39
4.4.1 General.....	39
4.4.2 Encode setup.....	40
4.4.3 Network setup.....	42
4.4.4 NetService.....	43
4.4.5 GUI Display.....	48
4.4.6 PTZ setup.....	50
4.4.8 Tour setup.....	51
4.5 Advanced.....	52
4.5.1 HDD Manage.....	52
4.5.2 Account.....	53
4.5.3 Online User.....	56
4.5.4 TV adjust.....	56
4.5.5 Auto Maintain.....	57
4.5.6 Restore.....	57
4.5.7 Upgrade.....	58
4.6 Info.....	58
4.6.1 HDD info.....	58
4.6.2 BPS.....	59
4.6.3 LOG.....	60
4.6.4 Version.....	61
4.7 Shut down system.....	61
5 FAQ and maintenance.....	62
5.1 FAQ.....	62
5.2 Maintenance.....	67
Appendix 1.Remote controller operation.....	68
Appendix 2.Mouse operation.....	69
Appendix 3.Hard disk capability calculation .....	70
Appendix 4.Technique parameters.....	71
2 Open-package check and cable connections.....	6
2.1 Open-package check.....	6
2.2 Hard disk installation.....	6

2.3 Front panel .....	7
2.4 Rear panel .....	8
2.5 Audio and video input and output connections .....	8
2.5.1 Video input connections.....	8
2.5.2 Video output connections and options.....	9
2.5.3 Audio signal input.....	9
2.5.4 Audio signal output.....	10
2.6 Alarm input and output connections .....	10
2.6.1 Alarm input port specification .....	11
2.6.2 Alarm output port specification.....	12
2.6.3 Alarm output port relay parameters .....	12
2.7 Speed dome connections.....	12
3 Basic operation.....	14
3.1 Turn on.....	14
3.2 Turn off.....	14
3.3 System Login .....	15
3.4 Preview.....	15
3.5 Desktop shortcut menu .....	16
3.5.1 Main menu.....	16
3.5.2 Playback .....	17
3.5.3 Record Mode.....	20
3.5.4 Alarm output.....	21
3.5.5 PTZ control.....	21
3.5.6 Color setting.....	27
3.5.7 Output Adjust.....	27
3.5.8 Logout.....	27
4 Main menu.....	29
4.1 Main menu navigation .....	29
4.2 Record.....	30
4.2.1 Record Config.....	30
4.2.2 Playback.....	32
4.2.3 Backup.....	32
4.3 Alarm Function.....	33
4.3.1 Motion Detect.....	33
4.3.2 Video Blind.....	36
4.3.3 Video Loss.....	37
4.3.4 Alarm input.....	37
4.3.5 Alarm output.....	38
4.3.6 Abnormal.....	38
4.4 System setup.....	39
4.4.1 General.....	39
4.4.2 Encode setup.....	40
4.4.3 Network setup.....	42
4.4.4 NetService.....	43
4.4.5 GUI Display.....	48

4.4.6 PTZ setup.....	50
4.4.8 Tour setup.....	51
4.5 Advanced.....	52
4.5.1 HDD Manage.....	52
4.5.2 Account.....	53
4.5.3 Online User.....	56
4.5.4 TV adjust.....	56
4.5.5 Auto Maintain.....	57
4.5.6 Restore.....	57
4.5.7 Upgrade.....	58
4.6 Info.....	58
4.6.1 HDD info.....	58
4.6.2 BPS.....	59
4.6.3 LOG.....	60
4.6.4 Version.....	61
4.7 Shut down system.....	61
5 FAQ and maintenance.....	62
5.1 FAQ.....	62
5.2 Maintenance.....	67
Appendix 1.Remote controller operation.....	68
Appendix 2.Mouse operation.....	69
Appendix 3.Hard disk capability calculation .....	70
Appendix 4.Technique parameters.....	71

---

## 2 Open-package check and cable connections

### 2.1 Open-package check

When you receive the DVR, please check first .

First, please check whether there is any visible damage to the package appearance. The protective materials used for the package of the DVR can protect most accidental clashes during transportation.

Then, please open the box and get rid off the plastic protective materials. Check whether there is any visible damage to the DVR appearance.

At last, please open the machine crust and check the data wire in the front panel, power wire, the connection between the fan power and the main board.

#### Front panel and rear panel

$\frac{14}{7}$  The key function specification in the front panel and the interface specification in the rear panel are in the specification.

$\frac{14}{7}$  Please check the product type in the front panel whether is accordant with the product type you order.


**The label in the rear panel is very important for the after service. Please protect it carefully. When you contact us for after service, please provide the product type and serial number in the label.**

### 2.2 Hard disk installation


For the first use, please install the hard disk.



1 disassemble the screw

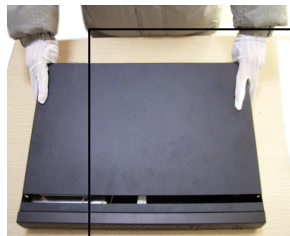

②disassemble the cover

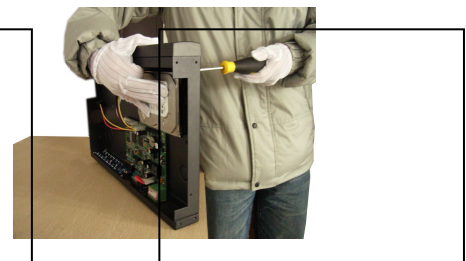


③fix the screw of hard disk



④fix the screw of hard disk




⑤connect the data wire

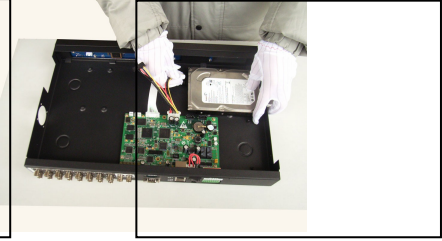

⑥connect the power wire



⑦cover the machine

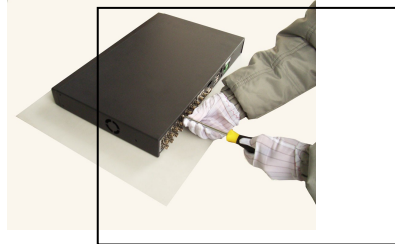

⑧fix the cover

### 2.3 Front panel


- (1) Power switch light (2) Power indicator light (3) USB (4)Record button  
 (5) Previous file (6) Play Pause (7) Input control / 10 (8) IR remote receiver  
 (9)Punctuation / 1 (A) ABC / 2 (B) DEF / 3 (C) GHI / 4  
 (D) JKL / 5 (E) MNO / 6 (F) PQRS / 7 (G) TUV / 8  
 (H) WXYZ / 9 (I) Space / 0 (J) Number switch (K) ESC  
 (L) Function (M) Direction / OK

Front panel button operating function table

No.	Name	Symbol	Function
21	Function	<b>FN</b>	input method switch and delete,operate function menu in the mode of preview
22	Direction	∨ ∨	In the Menu,press up or down to move Cursor
			Change configuration in the Drop-down menu
		∧ ∨	Press up or down to select record file in the playback status
			In the Preview screen,press up or down to go into 1/4/8/9/16 multiple channels screen
∧ ∨	∧ ∨	In the Menu,press left or right to move Cursor	
		In the playback status,press left or right to move cursor of function button	

	Enter	ENTER	Enter
			Enter into MainMenu
20	ESC	ESC	Back to previous Menu or cancel operation in the function menu
			Back to preview status when in the playback status
1	Power Switch		Boot up or shut down
5	Play previous file/Pause	II◀	Play previous record file or pause current record file when playback
6	Play/Pause	▶II	Play or Pause when playback
7	Input Control	🏠	In the preview screen,press it to channel 10,and press "right" to channel 11,12...16 Switch number and English letter
4	Record	○	Manually start/stop record for each channel

## 2.4 Rear panel

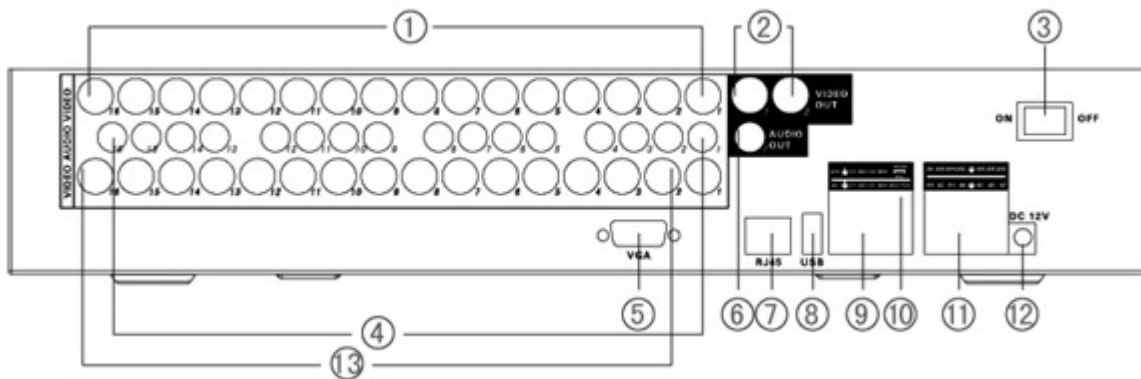

- |                  |                  |                  |                   |
|------------------|------------------|------------------|-------------------|
| (1) Video Input  | (4) Audio Input  | (7) Network      | (10) RS232        |
| (2) Video Output | (5) VGA          | (8) USB          | (11) Alarm Input  |
| (3) Switch       | (6) Audio Output | (9) Alarm Output | (12) Power supply |
| (13) Loop Output |                  |                  |                   |

## 2.5 Audio and video input and output connections

### 2.5.1 Video input connections

The video input port is BNC connector plug. The demand of input signal is PAL/NTSC BNC(1.0V<sub>p</sub>).

p,75Ω).

The video signal must be accorded with the state standard which has the high signal to noise ratio, low aberration and low interference. The image must be clear and has natural color in the appropriate brightness.

#### **Insure the vidicon signal stable and credible**

The vidicon should be installed in the appropriate location where is away from backlighting and low illumination or adopts the better backlighting and low illumination compensation.

The ground and power supply of the vidicon and the DVR should be shared and stable.

#### **Insure the transmission line stable and credible**

The video transmission line should adopt high quality coaxial pair which is chosen by the transmission distance. If the transmission distance is too far, it should adopt shielded twisted pair, video compensation equipment and transmit by fiber to insure the signal quality.

The video signal line should be away from the electro magnetic Interference and other equipments signal lines. The high voltage current should be avoided especially.

#### **Insure the connection stable and credible**

The signal and shield lines should be firm and connected credible which avoid false and joint welding and oxidation.

### **2.5.2 Video output connections and options**

The video output is divided into PAL/NTSC BNC( $1.0V_{p-p}, 75\Omega$ ) and VGA output(selective configuration).

When replace the monitor by the computer display, there are some issues to notice.

- 1、 Do not stay in the turn-on state for a long time.
- 2、 Keep the computer display normal working by demagnetizing regularly.
- 3、 Stay away from the electro magnetic Interference.

TV is not a credible replacement as a video output. It demands reducing the use time and control the power supply and the interference introduced by the nearby equipments strictly. The creepage of low quality TV can lead to the damage of other equipments.

### **2.5.3 Audio signal input**

Audio port is BNC connection.

The input impedance is high so the tone arm must be active.

The audio signal line should be firm and away from the electro magnetic Interference and connected credible which avoid false and joint welding and oxidation. The high voltage current should be avoided especially.

#### **2.5.4 Audio signal output**

Commonly the output parameter of DVR audio signal is greater than 200mv 1K $\Omega$ (BNC) which can connect the low impedance earphone and active sound box or other audio output equipments through power amplifier. If the sound box and the tone arm can not be isolated, howling phenomena is often existed. There are some methods to deal with the above phenomena.

- 1、 Adopt better directional tone arm.
- 2、 Adjust the sound box volume to be under the threshold that produces the howling phenomena.
- 3、 Use fitment materials that absorb the sound to reduce reflection of the sound.
- 4、 Adjust the layout of the sound box and the tone arm.

### **2.6 Alarm input and output connections**

#### **1 、 Alarm input**

- A. Alarm input is grounding alarm input.
- B. Alarm input demand is the grounding voltage signal.
- C. When the alarm is connected with two DVRs or connected with DVR and other equipments, it should be isolated by relay.

#### **2 、 Alarm output**

Alarm output can not be connected with high-power load(no more than 1A).When forming the output loop it must prevent the big current from relay damage. Use the contact isolator when there is a high-power load

#### **3 、 PTZ decoder connections**

- A. The grounding of the PTZ decoder and DVR must be shared otherwise the common-mode voltage will lead to the PTZ control failure. The shielded twisted pair is recommended.
- B. Avoid the entrance of high voltage. Make the layout reasonably. Take precaution from the thunder.
- C. In the outlying end connect 120 $\Omega$  resistance paralleled to reduce the inflection and insure the

signal quality.

D. The 485 AB lines of DVR can not connected with other 485 output equipments paralleled.


E. The voltage between the AB lines of the decoder must be less than 5V.

#### 4、Front equipment grounding note

Bad grounding can lead to the burnout of the chip.

#### 5、Alarm input type unlimited

The DVR alarm output port is constant opening type.

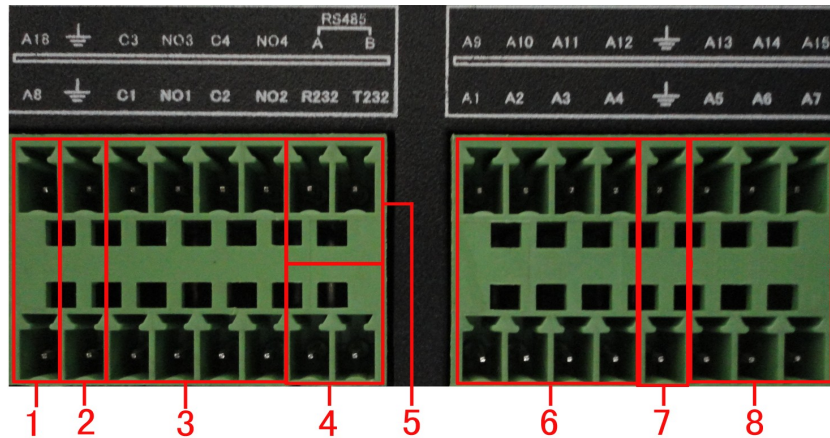

①⑥⑧Alarm Input    ②⑦Ground    ③Alarm Output    ⑤RS485    ④RS232

parameter	meaning
G	grounding
C1、NO1	Alarm output interface(constant open type)
T、R	RS232 port
A、B	485communication interface which is connected with the recording control equipments such as the decoder

#### 2.6.1 Alarm input port specification

1 channels alarm input. Alarm input type unlimited.

The grounding and the com port of the alarm sensor are parallel (The alarm sensor is external power supply) .

The grounding of the alarm and the DVR should be shared.

The NC port of the alarm sensor must be connected with the DVR alarm input port.

The grounding of the power supply and the alarm sensor must be shared when used in external power supply.

### 2.6.2 Alarm output port specification

1 channels alarm output. There is external power supply when using the external alarm equipment.


Please refer to the relay relevant parameters to avoid the overload that damages main machine.

### 2.6.3 Alarm output port relay parameters

Type: JRC-27F		
Interface material	silver	
rating (resistance load)	Rating switch capacity	30VDC 2A, 125VAC
	maximal switch power	125VA 160W
	maximal switch voltage	250VAC, 220VDC
	maximal switch current	1A
isolation	Homo-polarity	1000VAC 1minute
	Inhomo-polarity	1000VAC 1 minute
	Interface and winding	1000VAC 1 minute
Surge voltage	Homo-polarity	1500VAC (10×160us)
Turn-on time	3ms max	
Turn-off time	3ms max	
longevity	mechanical	50×106 MIN (3Hz)
	electric	200×103 MIN (0.5Hz)
Environment	-40~+70°C	

### 2.7 Speed dome connections

- 1、 Connect the 485 lines of the speed dome with the DVR 485 interface.

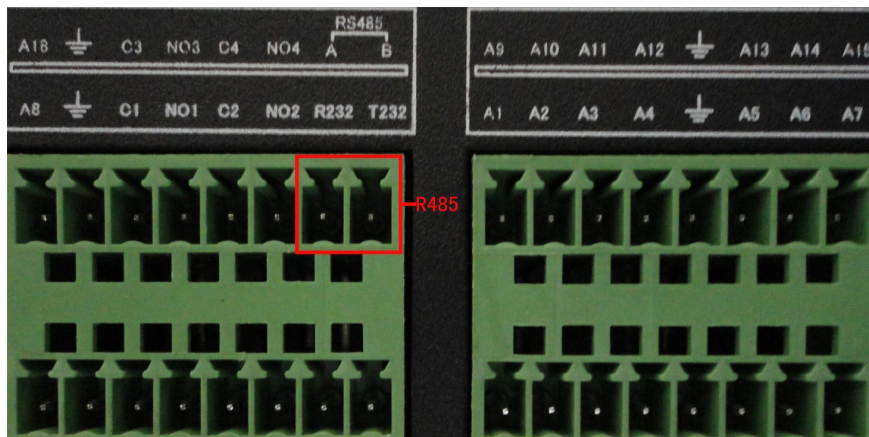

- 2、 Connect the video line with the DVR video input.

3、 Electrify the speed dome.

**Note: Speed dome A,B port and DVR A,B port should be corresponding connection,A is +, B is -**

---

## 3 Basic operation

Note: The button in gray display indicates nonsupport.

### 3.1 Turn on

Plug the power supply and turn on the power supply switch. Power supply indicator light shining indicates turning on the video recorder. After the startup you will hear a beep. The default setting of video output is multiple-window output mode. If the startup time is within the video setting time, the timing video recording function will start up automatically. Then the video indicator light of corresponding channel is shining and the DVR is working normally.

**Note:** 1. Make sure that the input voltage corresponds with the switch of the DVR power supply.

2. Power supply demands: 220V±10% /50Hz.

Suggest using the UPS to protect the power supply under allowable conditions.

### 3.2 Turn off

There are two methods to turn off the DVR. Entering [main menu] and choosing [turn off] in the [turn off the system] option is called soft switch. Pressing the power supply switch is called hard switch.

Illumination:

#### 1、 Auto resume after power failure

If the DVR is shut down abnormally, it can automatically backup video and resume previous working status after power failure.

#### 2、 Replace the hard disk

Before replacing the hard disk, the power supply switch in the real panel must be turned off.

#### 3、 Replace the battery

Before replacing the battery, the setting information must be saved and the power supply switch in the real panel must be turned off. The DVR uses button battery. The system time must be checked regularly. If the time is not correct you must replace the battery, we recommend replacing the battery every year and using the same battery type.

**Note: The setting information must be saved before replacing the battery otherwise information will lose.**

### 3.3 System Login

When the DVR boots up, the user must login and the system provides the corresponding functions with the user purview. There are three user settings. The names are **admin**, **guest** and **default** and these names have no password. **Admin** is the super user purview; guest and **default**'s permissions are preview and video playback. User **admin** and **guest**'s password can be revised, while their permissions can't be revised; user **default** is the default login user whose permission can be revised but not its password.



Picture 3.1 System Login

**Password protection: If the password is continuous wrong three times, the alarm will start. If the password is continuous wrong five times, the account will be locked. (Through reboot or after half an hour, the account will be unlocked automatically).**

**For your system security, please modify your password after first login.**

### 3.4 Preview

You can right click mouse to choose the switch between the windows.

The system date, time and channel name are shown in each viewing window. The surveillance video and the alarm status are shown in each window.





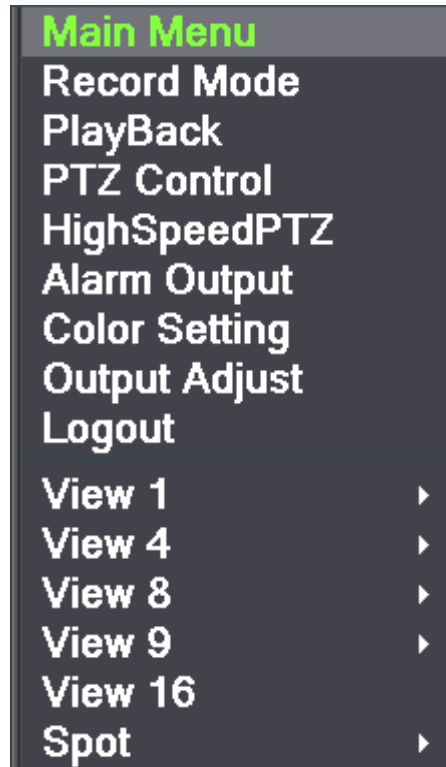
1		Recording status	3		Video loss
2		Motion detect	4		Camera lock

Table 3.1 Preview icon

### 3.5 Desktop shortcut menu

In preview mode you can right click mouse to get a desktop shortcut menu. The menu includes: main menu,record mode,playback,PTZ control,High Speed PTZ,Alarm Output,color Setting,Output adjust,Logout,view1/4/8/9/16 screens.



Picture 3.2 Shortcut Menu

#### 3.5.1 Main menu

When you login, the system main menu is shown as below.




Picture3.3 Main Menu

### 3.5.2 Playback

There are two methods for you to play the video files in the hard disk.

- 1、 In the desktop shortcut menu.
- 2、 Main menu>Record->Playback

**Note: The hard disk that saves the video files must be set as read-write or read-only state.(4.5.1)**

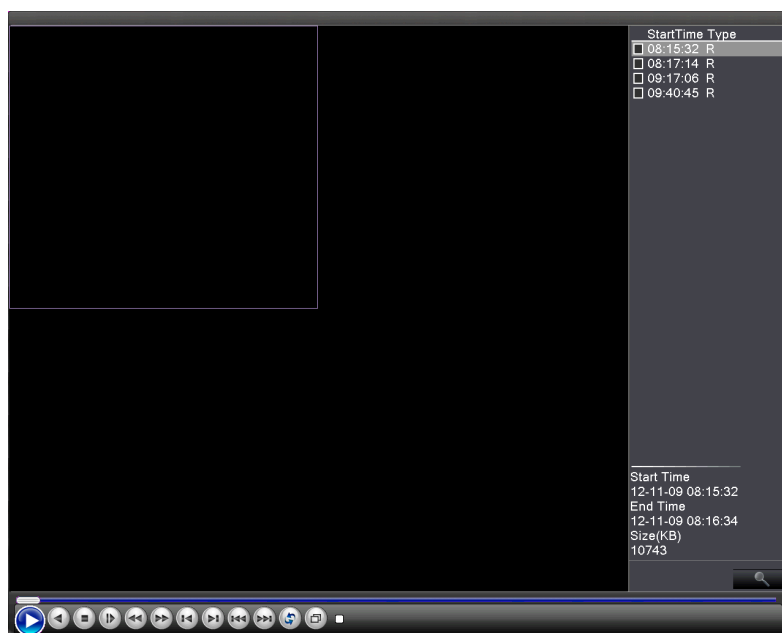

Picture 3.4 video playback


- 1. listed files
- 2. file information
- 3. file searching
- 4. file backup
- 5. Operation hint
- 6. Playback control

【Listed files】 Look up the listed files that accord with the searching criteria.

【File information】 Look up the found file information.

【File backup】 Backup the chosen file. Click the button and operate as followed.

**Note: The storage must be installed before the file backup. If the backup is terminated, the already backup can playback individually.**

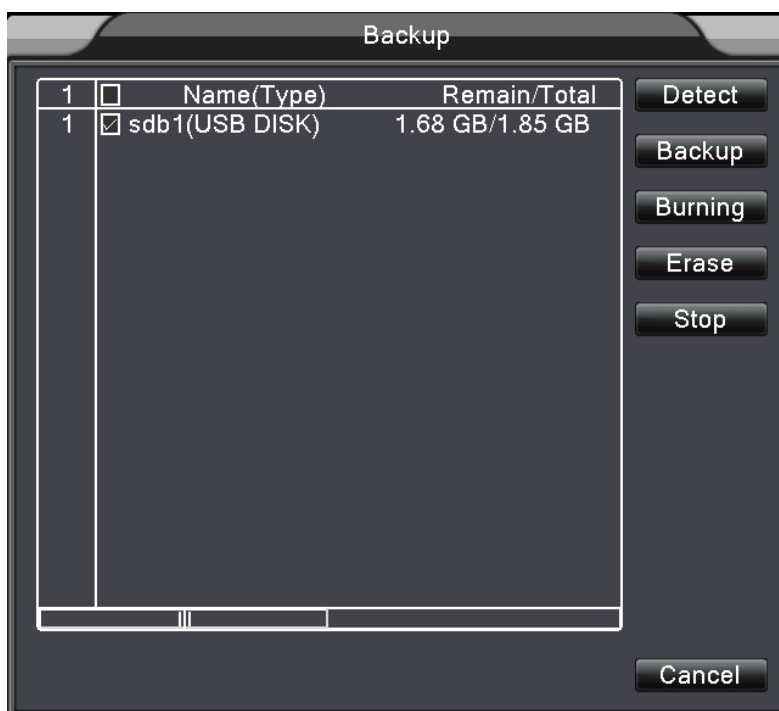


Picture 3.5 detect the storage

**Detect:** Detect the storage connected with the DVR such as hard disk or universal disk.

**Erasure:** Choose the file to delete and click erasure to delete the file.

**Stop:** Stop the backup.

**Backup:** Click backup button and the dialog box is popped up. You can choose the backup file according to the type, channel and time.

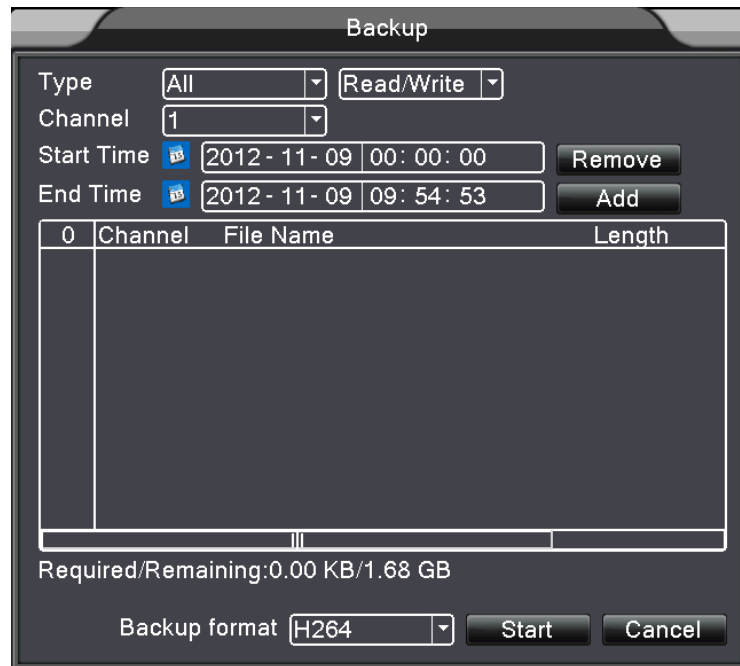

Picture 3.6 recording backup


**Remove:** Clear the file information.

**Add:** Show the file information satisfying the set file attributes.

**Start/Pause:** Click the play button to start the backup and click the pause button to stop the backup.

**Cancel:** During backup you can exit the page layout to carry out other functions.

**【File searching】** Search the file according to the searching parameter.

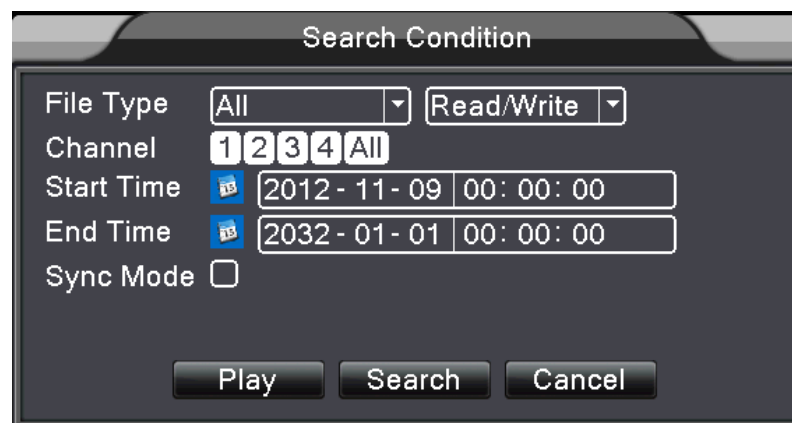

Picture 3.7 file searching

**File type:** Set the searching file type.

**Channel:** Set the searching channel.

**Start Time:** Set the searching time scan.

**【Playback control】** Refer to the following sheet for more information.













Button	Function	Button	Function
	Play/pause		Backward
	Stop		Slow play
	Fast play		Previous frame
	Next frame		Previous file
	Next file		Circulation
	Full screen		

Table 3.2 Playback control key

**Note: Frame by frame playback is only performed in the pause playback state.**

【Operation hint】 Display the function of the cursor place.

### Special functions:


**Accurate playback:** Input time (h/m/s) in the time column and then click play  button. The system can operate accurate playback according to the searching time.

**Local zoom:** When the system is in single-window full-screen playback mode, you can drag your mouse in the screen to select a section and then left click mouse to realize local zoom. You can right click mouse to exit.

### 3.5.3 Record Mode

Please check current channel status: “○” means it is not in recording status, “●” means it is in recording status.

You can use desktop shortcut menu or click [main menu]> [recording function]> [recording set] to enter the recording control interface.

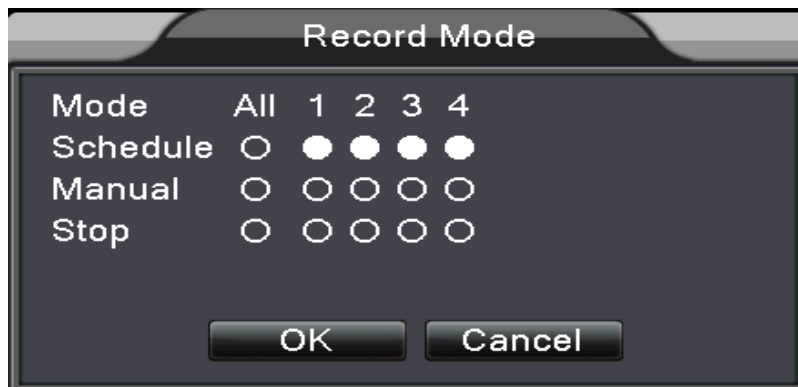

Picture 3.8 Record Mode

【Schedule】 Record according to the configuration.


**【Manual】** Click the all button and the according channel is recording no matter the channel in any state.

**【Stop】** Click the stop button and the according channel stops recording no matter the channel in any state.

### 3.5.4 Alarm output

Please check current channel status: “○” means it is not in alarming status, “●” means it is in alarming status.

You can use desktop shortcut menu or click [main menu]> [alarm function]> [alarm output] to enter the alarm output interface.

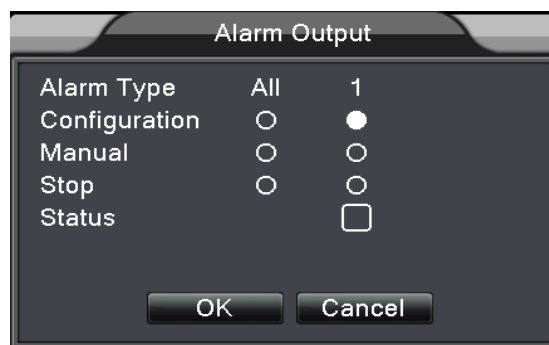

Picture 3.9 alarm output

**【Configuration】** Alarm is on according to the configuration.

**【Manual】** Click the all button and the according channel is alarming no matter the channel in any state.

**【Stop】** Click the stop button and the according channel stops alarming no matter the channel in any state.

### 3.5.5 PTZ control

Operation interface is as followed. The functions include: PTZ direction control, step, zoom, focus, iris, setup operation, patrol between spots, trail patrol, boundary scan, assistant switch, light switch, level rotation and so on.



**Note**1. Decoder A(B)line connects with DVR A(B)line. The connection is right.



2. Click [main menu] >[system configuration] >[PTZ setup] to set the PTZ parameters.
3. The PTZ functions are decided by the PTZ protocols.





Picture 3.10 PTZ setup

【Speed】 Set the PTZ rotation range. Default range: 1 ~ 8.

【Zoom】 Click  /  button to adjust the zoom multiple of the camera.

【Focus】 Click  /  button to adjust the focus of the camera .

【Iris】 Click  /  button to adjust the iris of the camera.

【Direction control】 Control the PTZ rotation. 8 directions control is supportive.(4 directions in Front panel is supportive )

【High speed PTZ】 Full-screen show channel image. Left press mouse and control PTZ to rotate orientation. Left press mouse and then rotate the mouse to adjust the zoom multiple of the camera.

【Set】 Enter the function operation menu.

【Page switch】 Switch between different pages.

## Special functions:

### 1、Preset

Set a location for the preset, calls the preset points, PTZ automatically turns to the setting position

#### 1) Preset option


Set a location for the preset, procedure is as follows:

Step1: in Picture 3.10, click the Direction button will turn into preset position , click the Settings button to enter Picture 3.11.

Step 2: click the Preset button , then write the preset points in the input blank,

Step 3: click Settings button, return the Picture 3.10 Complete setup, that is the preset points and preset position corresponds.


**Clear Preset:** Input preset points, click Remove button, remove the preset.

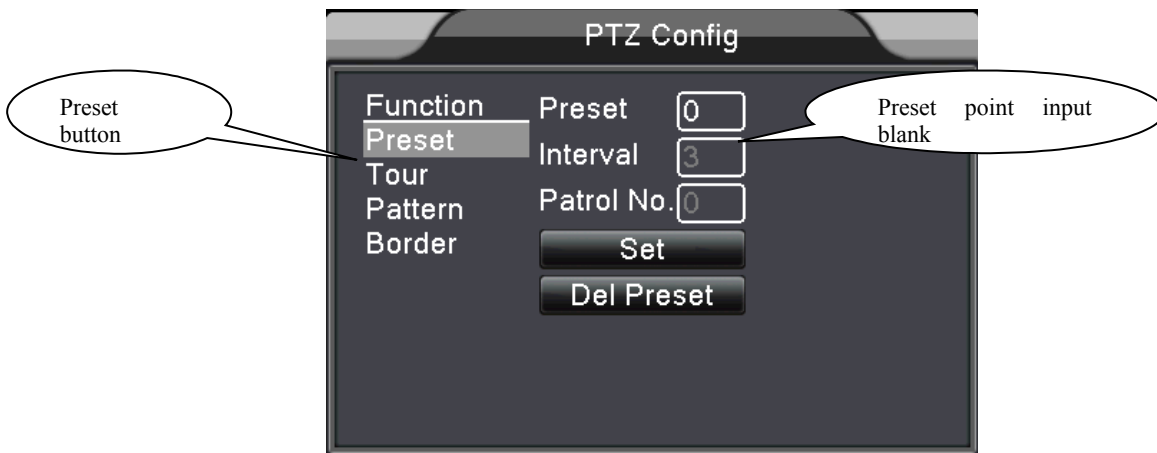

Picture 3.11 Preset Settings

## 2) Preset Point Calls

In Picture 3.10, click Page Shift button, enter PTZ control interface as shown in Picture 3.12. In the input blank, write the preset points, then click Preset button, PTZ turn to the corresponding preset point.

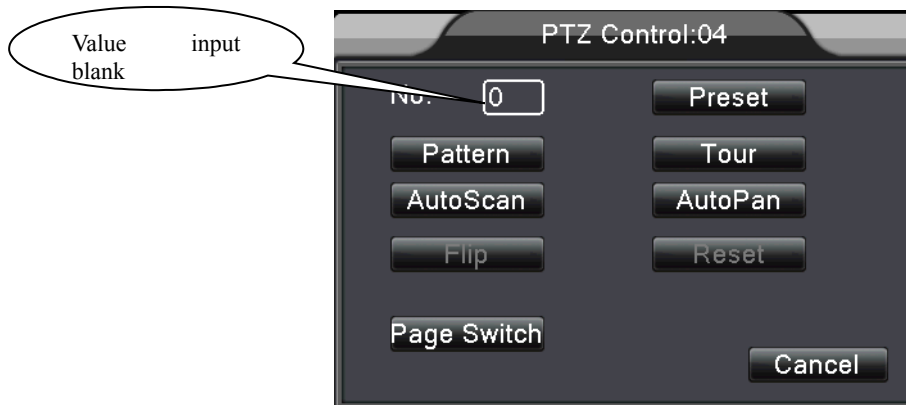

Picture 3.12 PTZ Control

## 2、Cruise between Points

Multiple preset points connected cruise lines, call cruise between points, the PTZ run around on the line

### 1) Cruise Between Points Settings

Cruise lines is connected by multiple preset points, setting procedure is as follows:

Step1: In Picture 3.10, the Direction key will turn PTZ to designated location , click Settings button to enter Picture 3.13,


Step 2: click Cruise buttons, the write proper value into the Cruise Line and Preset Points blank , then click Add Preset Points button, complete setting (also can add and delete cruise line

which has been set up)

Step 3: repeat step1 and step2 , until set out all the preset designated cruise lines .

**Remove Preset:** Please input preset value in the blank, click Remove Preset button, then remove the preset points.

**Remove Cruise Line:** Input the number of cruise line, click Remove Cruise Lines button, then remove the cruise lines set.

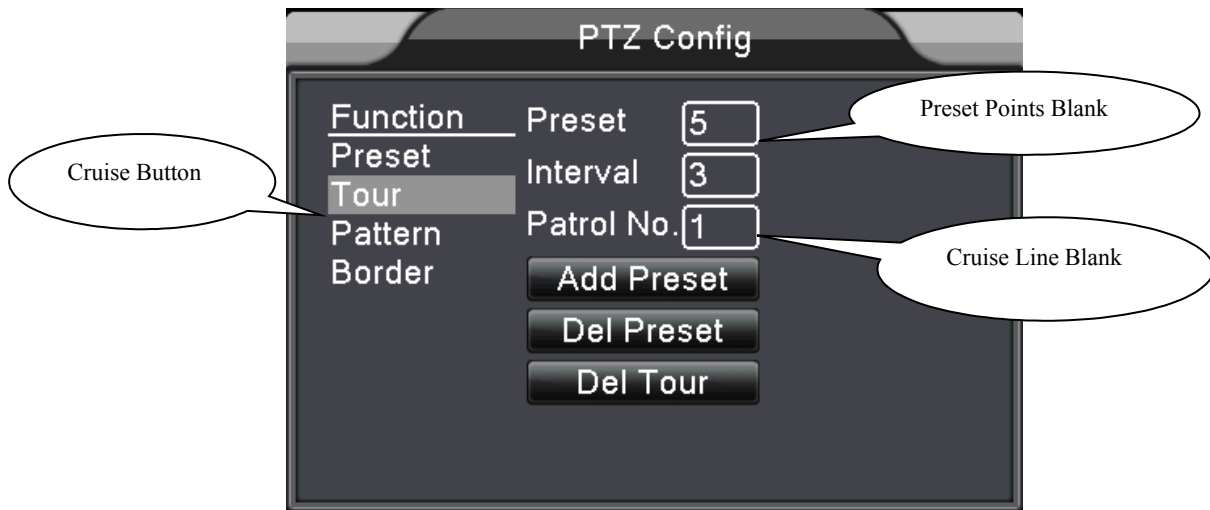

Picture 3.13 Cruise Between Points Settings

## 2) The Calls of Cruise between Points

In Picture 3.10, click Page Shift button, enter PTZ control menu as shown in Picture 3.12. Please input the number of cruise in the value blank, then click Cruise between Points button, PTZ begins to work on the cruise line. Click Stop button to stop cruise.

## 3、Scan

PTZ also can work on the preset scan line repeatedly.

### 1) Scan setup


Step1: In Picture 3.10, click Setup button , enter Picture 3.14;

Step2: Click Scan button, the input proper value in the scan value blank;

Step3 : Click Start button, enter Picture3.10 , here you can set the following items:

Zoom 、 Focus、 Aperture、 Direction and so on. Click Setup button to go back Picture 3.14;

Step4: Click End button to complete setup。 Click the right button of the mouse to exit.

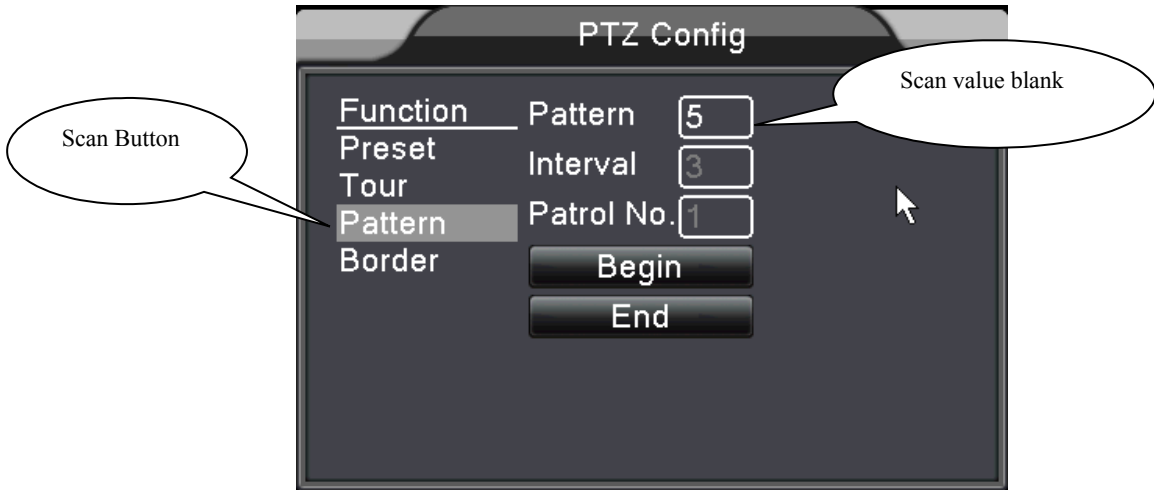

Picture 3.14 Scan Setup

## 2) Scan Calls

In Picture 3.10, click Page Shift button, then enter PTZ control menu as shown in Picture 3.12. Please input the number of scan in the value blank , then click Scan button , PTZ begins to work on the scan line . Click Stop button to stop.


## 4、 Boundary Scan

### 1) Boundary Scan setup

Step1 : In Picture 3.10, click Direction button to turn the PTZ to preset direction, then click Setup button enter Picture 3.15, select the left boundary, return to Picture 3.10;

Step2 : Please click direction arrows to adjust PTZ direction, click Setup button enter Picture3.15, then select the right boundary ,return to Picture 3.10;

Step3: Complete setup, that is the position of left and right boundary

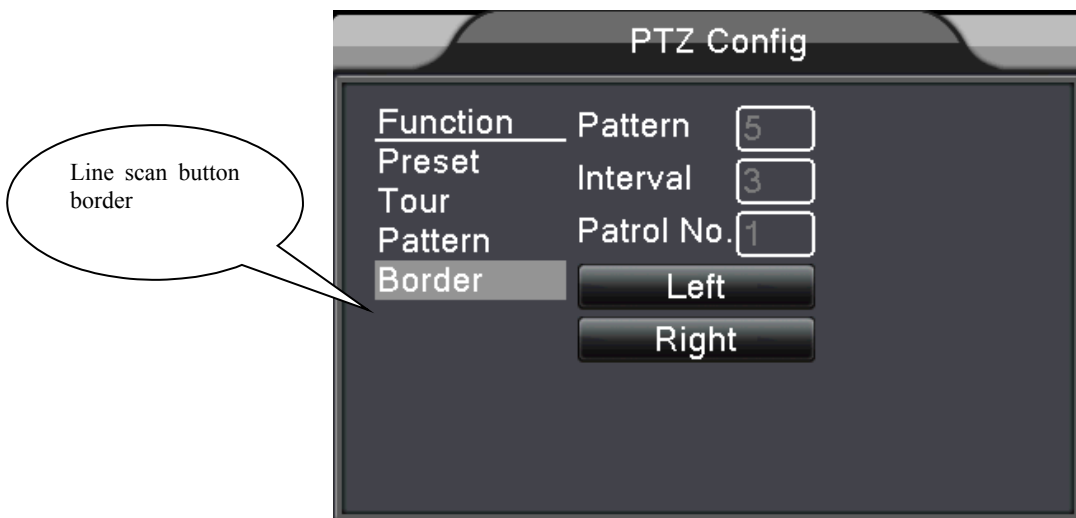

Picture 3.15 Boundary Scan Setup

## 2) Boundary Scan Calls

In Picture 3.10, click Page Shift button, then enter PTZ control menu as shown in Picture 3.12. Please input the number of scan in the value blank , then click Scan button , PTZ begins to work on the scan line . Click Stop button to stop.

## 5、 Horizontal Rotating

Click Horizontally Rotating button, PTZ begins to rotate horizontally (relative to the original position of the camera). Click the Stop button to stop.

## 6、 Rotate


Click on horizontal Rotating button, PTZ turn around.

## 7、 Reset

PTZ restart, all the data clears to 0. .

## 8、 Page Shift

In Picture 3.12, click Page Shift button into Picture3.16, setting auxiliary function. Auxiliary number corresponding to auxiliary switch on the decoder.

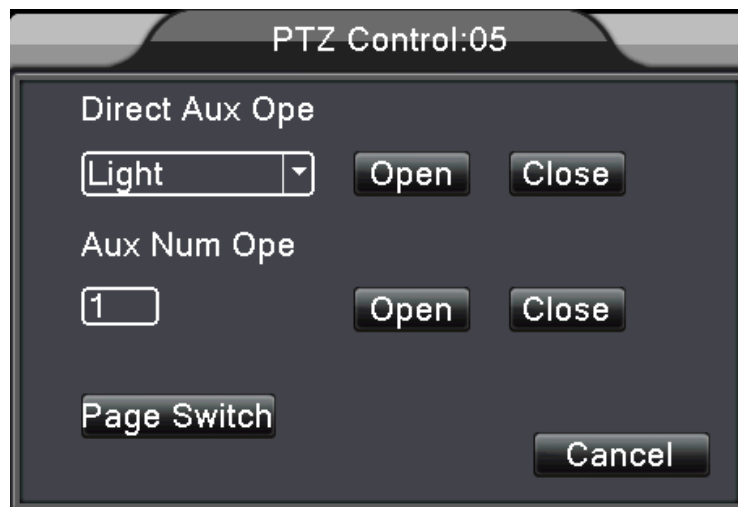

Picture 3.16 Auxiliary Function Control


**【Intuitive Auxiliary Operation】** choose auxiliary equipment, select Open or Close button, switch control;

**【 Auxiliary Number 】** The operation of corresponding auxiliary switch according to PTZ agreement;

**【Page Shift】** In Picture 3.16, click Page Shift button enter the Picture 3.17 PTZ Main Menu , the menu itself can be control by the menu control buttons

### 3.5.6 Color setting


Set the selective image parameters (current channel for single window display and cursor place for multi-window display). You can use the desktop shortcut menu and enter the interface. The image parameters include: tonality, brightness, contrast, saturation. You can set different parameters at different time sections.

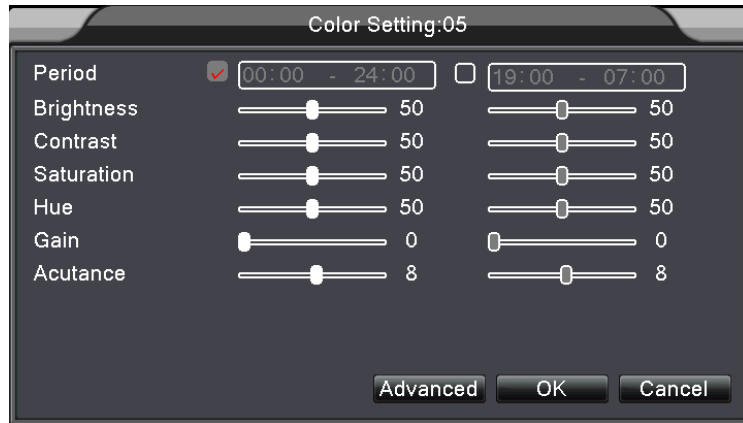

Picture 3.18 Color Setting

### 3.5.7 Output Adjust


Adjust TV output area parameters. You can use the desktop shortcut menu or enter [main menu]> [management tools]> [Output adjust].

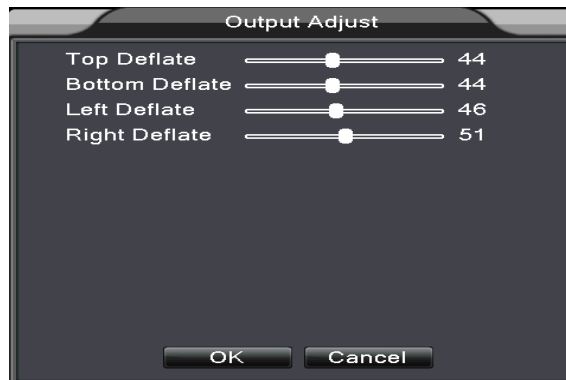

Picture 3.19 Output Adjust

### 3.5.8 Logout

Logout, shut down the system or reboot up. You can use the desktop shortcut menu or enter [main menu].

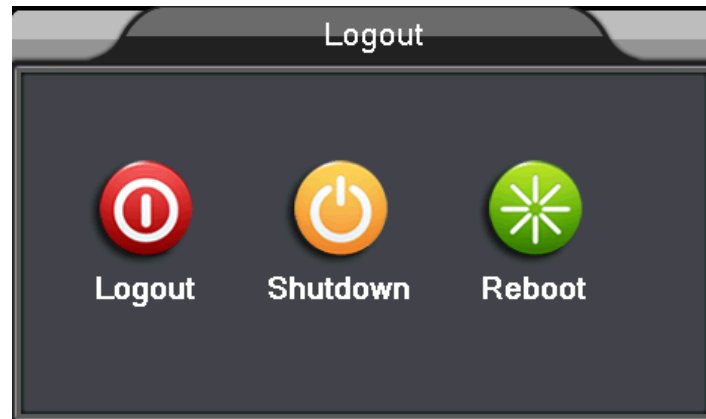

Picture 3.20 Logout/Shutdown/Reboot the system

**【logout】** Quit the menu. Offer password next entrance.

**【shut down】** Quit the system. Turn off the power supply.

When press the shut down button, there is schedule hint. After three seconds, the system is shut down. Cancel midway is of no effect.

**【reboot】** Quit the system. Reboot up the system..

#### 3.5.9 Window switch

Preview in single window/four windows/eight windows/nine windows/sixteen windows according to your choice.

## 4 Main menu

### 4.1 Main menu navigation

Main menu	Sub menu	Function
Record	Config	Set the recording configuration, recording type, recording time section
	playback	Set recording look-up, recording play, video file storage
	backup	Detect or format backup equipment, back the selective files
Alarm	Motion detection	Set motion detect alarm channel, sensitivity, area, linkage parameters: defending time section, alarm output, screen hint, recording, PTZ, patrol
	Video blind	Set camera mask alarm channel, sensitivity, linkage parameters: defending time section, alarm output, screen hint, recording, PTZ, patrol
	Video loss	Set video loss alarm channel, linkage parameters: defending time section, alarm output, screen hint, recording, PTZ, patrol
	Alarm input	Set alarm input channel, equipment type, linkage parameters: defending time section, alarm output, screen hint, recording, PTZ, patrol
	Alarm output	Set alarm mode: configuration, manual, shut down
System configuration	General configuration	Set system time, data format, language, hard disk full time operation, machine number, video format, output mode, summertime, stay time
	Encode configuration	Set main(assistant)coding parameter: code mode, resolving ability, frame rate, code stream control, image quality type, code stream value, frame between value, video/audio enable
	Network configuration	Set basic network parameters, DHCP and DNS parameters, network high speed download
	NetService	PPPOE、NTP、Email、IP purview、DDNS parameter
	GUI display	Set channel name, preview hint icon state, transparency, cover area, time title, channel time fold
	PTZ configuration	Set channel, PTZ protocol, address, baud rate, date bit, stop bit, check
	Serial port Configuration (RS232)	Set serial port function, baud rate, date bit, stop bit, check
	Tour	Set patrol mode and interval time


Management tools	Hard disk management	Set appointed hard disk as read-write disc, read-only disc or redundant disc, clear data, resume date and so on
	User management	Modify user, team or password. Add user or team. Delete user or team.
	Online user	Break the connection with the already login user. Lock the account after break until booting up again.
	TV adjust	Adjust TV upside, downside, nearside, starboard distance
	Automatic maintenance	Set automatic reboot system and automatic deleting files.
	Restore	Resume setup state: common setup, code setup, recording setup, alarm setup, network setup, network service, preview playback, serial port setup, user management
	Upgrade	Upgrade the device by USB port
	Device Info	Show device video, audio and alarm ports
System information	Hard disk information	Display hard disk capability and recording time
	Code stream statistics	Display code stream information
	Log information	Clear all log information according to the log video and time
	Edition information	Display edition information
Shut down		Logout, shut down or reboot

## 4.2 Record

### 4.2.1 Record Config

Set the recording parameters in the surveillance channel. The system is set 24 hours consecutive recording in the first startup. You can enter [main menu]> [recording function]> [recording setup] to set.

**Note:** There is at least one read-write hard disk. (refer to chapter 4.5.1)

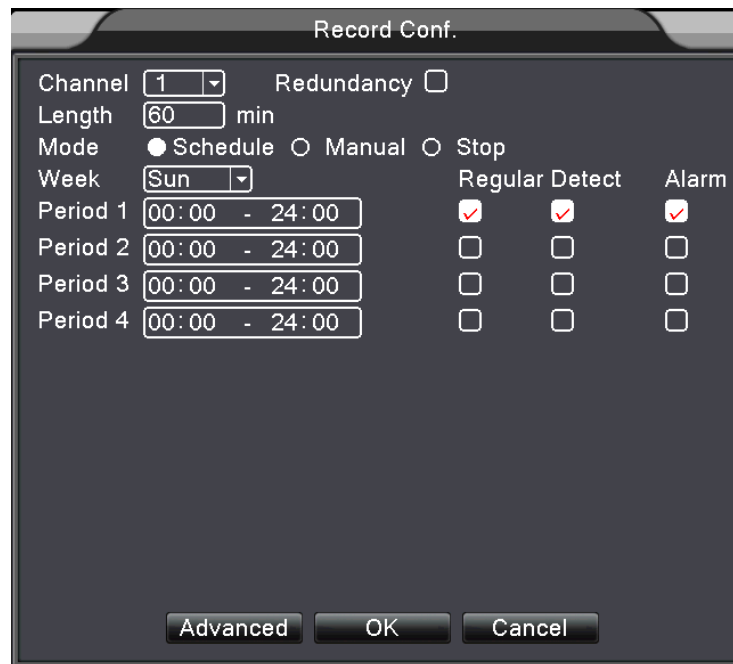

Picture 4.1 Record Config

**【Channel】** Choose the corresponding channel number to set the channel. Choose the all option to set the entire channels.

**【Redundancy】** Choose the redundancy function option to implement the file double backup function. Double backup is writing the video files in two hard disks. When you do the double backup, make sure that there are two hard disks installed. One is read-write disk and the other is redundant disk. (refer to 4.5.1)

**【Length】** Set the time length of each video file. 60minutes is default value.

**【PreRecord】** Record 1-30 seconds before the action. (time length is decided by the code stream)

**【Record mode】** Set video state: schedule, manual or stop.

**Schedule:**Record according to the set video type (common, detection and alarm)and time section.

**Manual:**Click the button and the according channel is recording no matter the channel in any state.

**Stop:**Click the stop button and the according channel stops recording no matter the channel in any state.

**【Period】** Set the time section of common recording, The recording will start only in the set range.

**【Record type】** Set recording type: regular, detection or alarm.

**Regular:**Perform the regular recording in the set time section. The video file type is “R”.

**Detect:**Trigger the “motion detect”, “camera mask” or “video loss” signal. When above

alarm is set as opening recording, the “detection recording” state is on. The video file type is “M”.

**Alarm:** Trigger the external alarm signal in the set time section. When above alarm is set as opening recording, the “detection recording” state is on. The video file type is “A”.

**Note:** Refer to chapter 4.3 to set corresponding alarm function.

#### 4.2.2 Playback

Refer to chapter 3.5.2.

#### 4.2.3 Backup

You can backup the video files to external storage through setup.

**Note:** The storage must be installed before the file backup. If the backup is terminated, the already backup can playback individually.



Picture 4.3 Backup


**【Detect】** Detect the storage connected with the DVR such as hard disk or universal disk.

**【Erase】** Choose the file to delete and click erasure to delete the file.

**【Stop】** Stop the backup.

**【Backup】** Click backup button and the dialog box is popped up. You can choose the backup file according to

the type, channel and time.

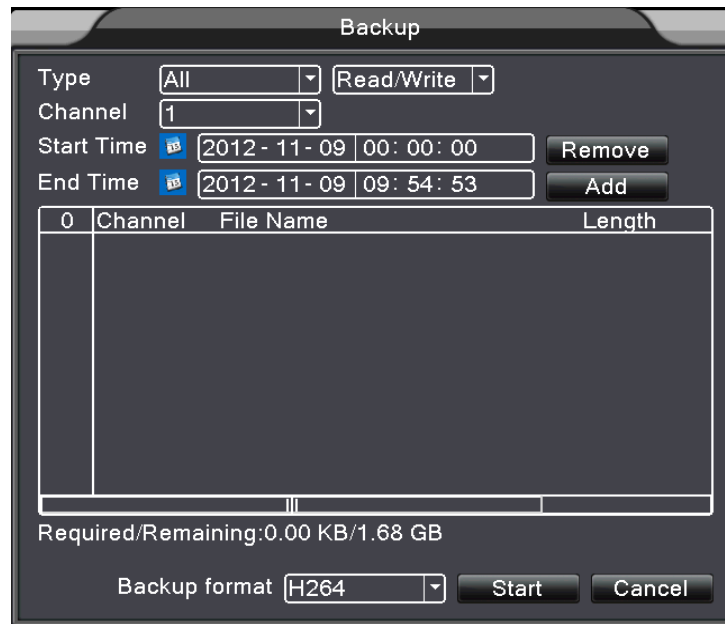

Picture 4.4 File Backup

**Remove:** Clear the file information.

**Add:** Show the file information satisfying the set file attributes.

**Start/pause:** Click the play button to start the backup and click the pause button to stop the backup.


**Cancel:** During backup you can exit the page layout to carry out other functions.

### 4.3 Alarm Function

Alarm functions include: motion detect, video blind, video loss, alarm input and alarm output.

#### 4.3.1 Motion Detect

When system detects the motion signal that reaches the set sensitivity, the motion detect alarm is on and the linkage function is turned on.

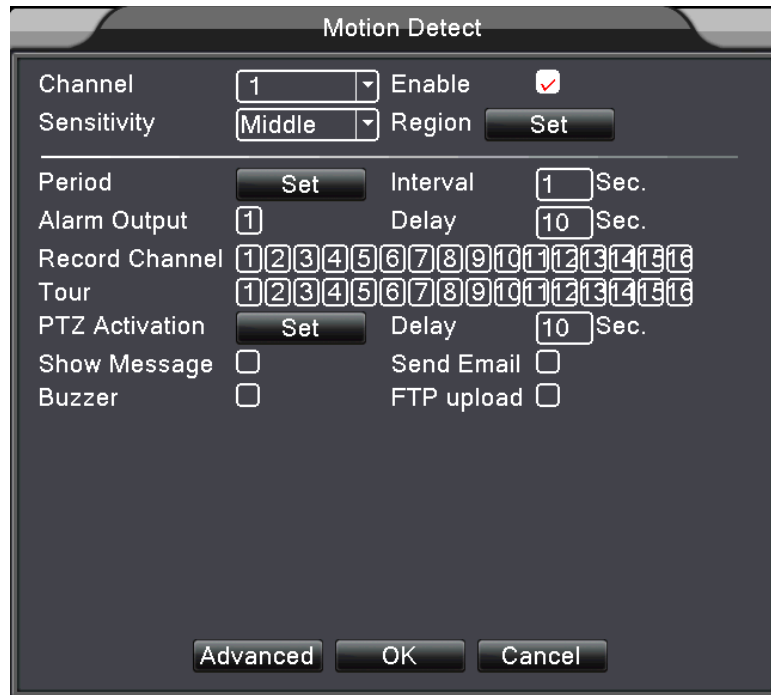


Picture 4.4 Motion Detect

**【Channel】** Choose the set motion detect channel.

**【Enable】**  means that the motion detect function is on.

**【Sensitivity】** Choose in the six options according to the sensitivity.


**【Region】** Click setup and enter the set area. The area is divided into PAL22X18. Green block means the current cursor area. Yellow block means the dynamic detect defensive area. Black block means the unfenced area. You can set the area as followed, Drag the mouse and draw the area.

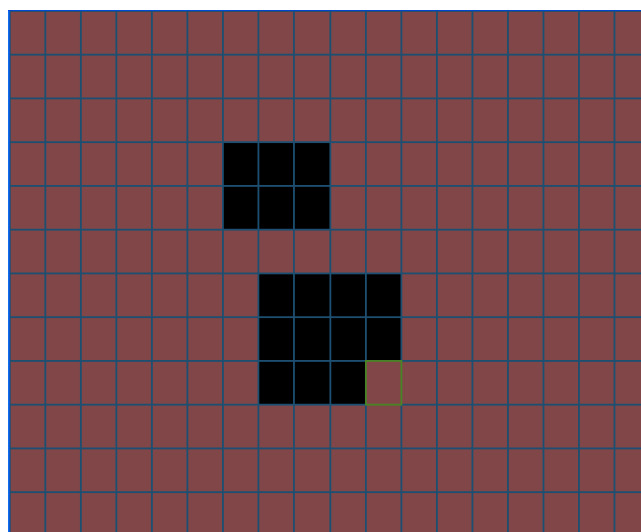

Picture 4.5 Region

**【Period】** Trigger the motion detect signal in the set time section. You can set according to week or set

uniformly. Each day is divided into four time sections. ■ means the set valid.

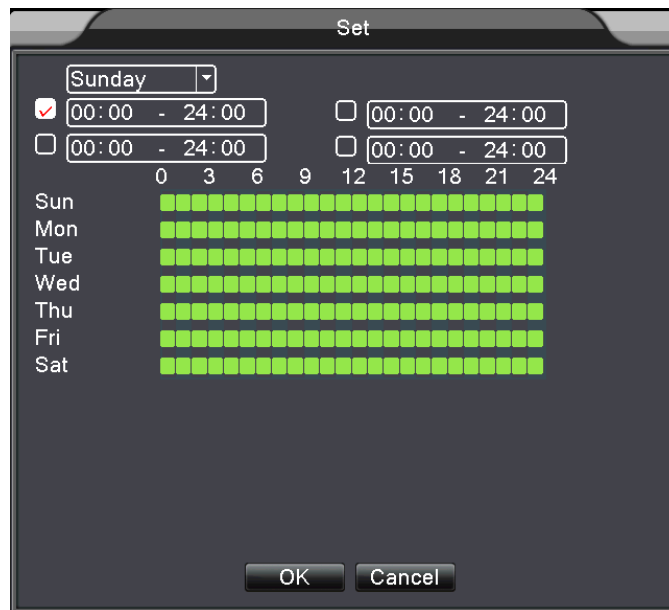

Picture 4.6 set the time section

**【Interval】** Only one alarm signal is turned on even there are several motion detect signals in the set interval.

**【Alarm output】** Start the external equipment of corresponding linkage alarm when the motion detect alarm is turned on.

**【Delay】** Delay a few moments and stop when the alarm state is turned off. The range is 10~300 seconds.

**【Record channel】** Choose the recording channel (multiple option supportive). Trigger the video signal when the alarm is turned on.

**Note:** Set in the [recording setup] and perform the linkage recording. Start detecting video files in the corresponding time section.

**【Tour】** ■ means that the selective channel is single window alternate patrol preview. The interval is set in the [MainMenu]>[System] > [Tour].


**【Snapshot】** Choose record channels, when alarm happens, system triggers related channels for snapshot signal.

**Note:** For Snapshot activation, pls go to set period, detect and alarm enable at MainMenu->Record->Record config,

**【PTZ Activation】** Set the PTZ activation when the alarm is turned on.

**Note:** PTZ activation is set in the [shortcut menu] > [PTZ control]. Set the patrol between spots,

trail patrol and so on.

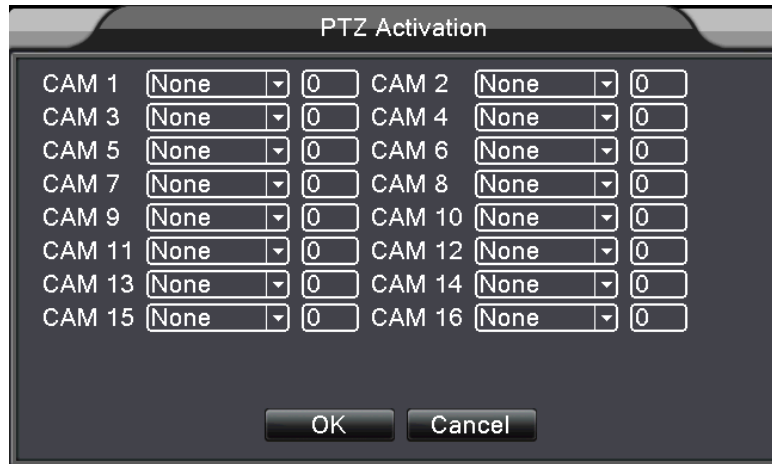

Picture 4.8 PTZ Activation

**【Delay】** When alarm is over, recording will last some seconds(10~300sec), then stop.


**【Show message】** Pop the alarm information dialog box in the local host computer screen.

**【Send EMAIL】** ■ means sending an email to user when the alarm is turned on.

**Note:** Set in the [NetService] and send email.

#### 4.3.2 Video Blind

When the video image is influenced by the environment such as bad brightness or reaching the set sensitivity parameter, the camera mask function is turned on and the linkage function is turned on.

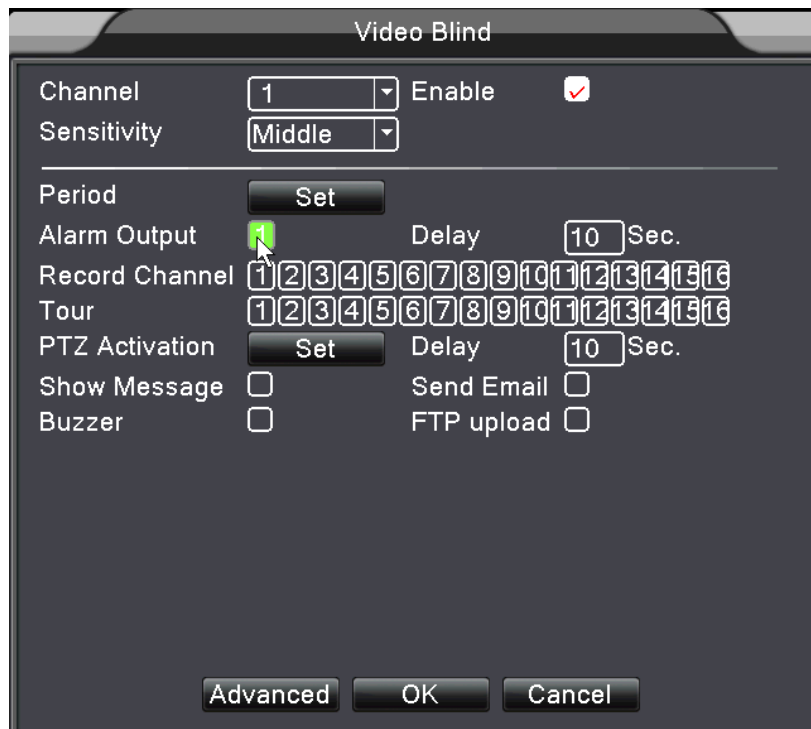


Picture 4.9 Video Blind

Set method: refer to chapter 4.3.1. Motion detect

**Note:**"Advanced" button is the same as rightclick.

### 4.3.3 Video Loss

When the equipment can not obtain the channel video signal, the video loss alarm is turned on and the linkage function is turned on.

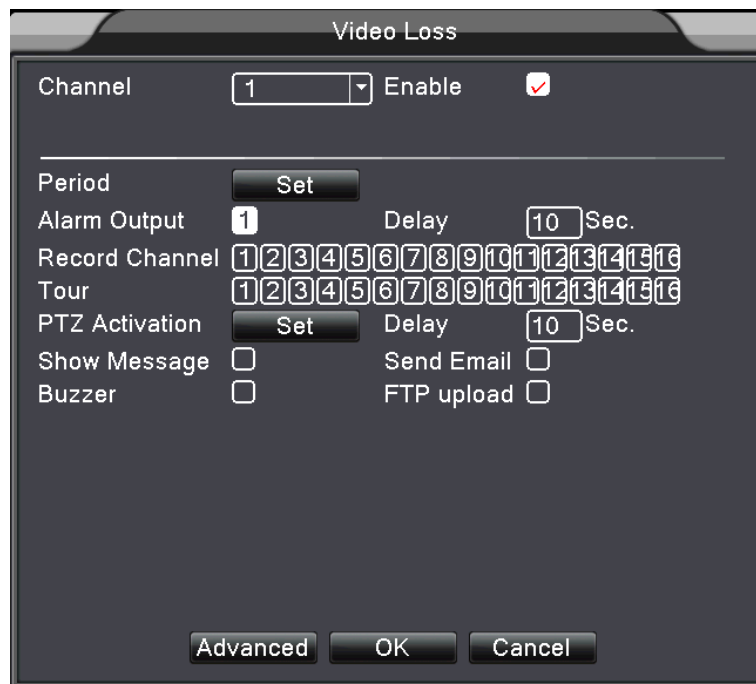


Picture 4.10 Video loss

Set method: refer to chapter 4.3.1. Motion detect

**Note:**"Advanced" button is the same as rightclick.

### 4.3.4 Alarm input

When the equipment obtains the external alarm signal, the alarm function is turned on.

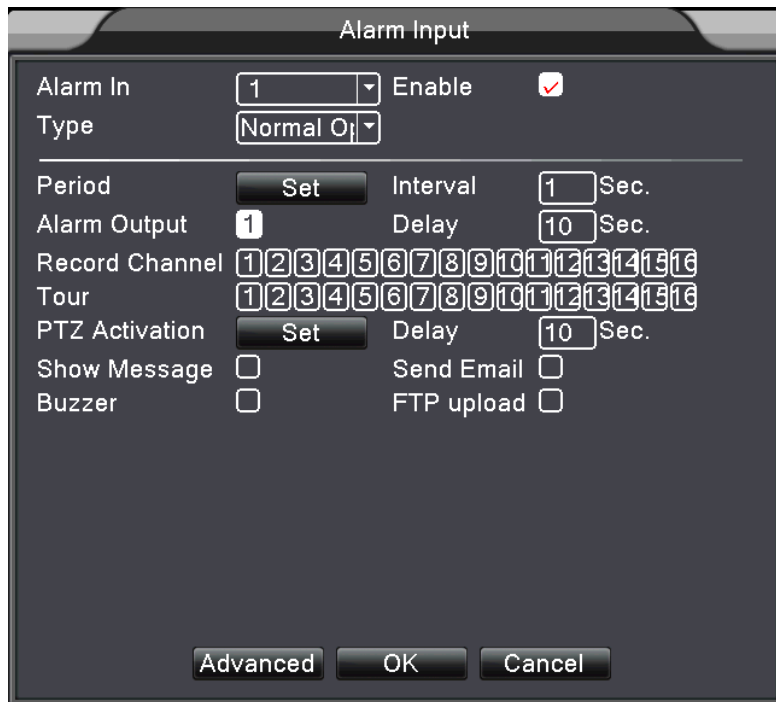

Picture 4.11 Alarm input

Set method: refer to chapter 4.3.1. Motion detect


**Note:**"Advanced" button is the same as rightclick.

#### 4.3.5 Alarm output

Refer to chapter 3.5.4.

#### 4.3.6 Abnormal

Analysing and inspecting current software and hardware of the device: When some abnormal events happen,the device will make a relative answer such as show message and buzzer.

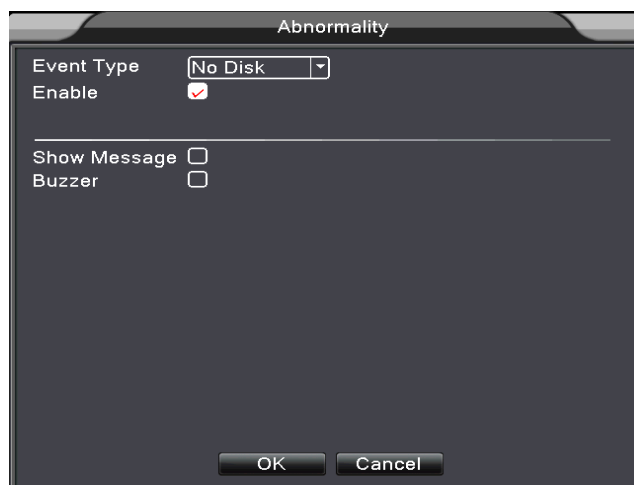


Picture 4.12 Abnormal

- 【Event Type】 selecting abnormality you want to inspect
- 【Enable】 Select it to make sure abnormal function workable
- 【Show message】 Automatically alarm cue dialog box come out of the main screen
- 【Buzzer】 Device will have two long nosie “di di” while alarm is happening

#### 4.4 System setup

Set the system parameters such as **General,Encode,NetWork,NetService,GUI display,PTZ config, RS232 and Tour setup.**

#### 4.4.1 General

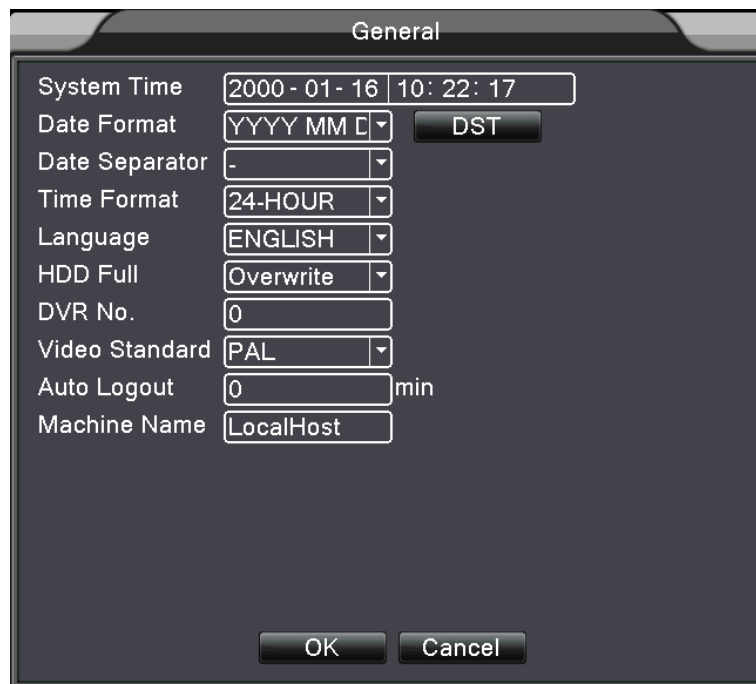

Picture 4.13 General setup

【System time】 Set the system data and time.

【Date format】 Choose the data format: YMD, MDY, DMY.

【Date Separator】 Choose list separator of the data format.

【Time Format】 Choose time format: 24-hour or 12-hour.

【Language】 English, French, Portugueses, Russian, Italian, S-Chinese, T-Chinese, Spanish, Thai, Greek, Japanese, German, Polish.

【HDD full】 Choose stop record: Stop recording when the hard disk is full.


Choose overwrite: Cover the earliest recording files and continue recording when the hard disk is full.

【DVR No.】 Only when the address button in the remote controller and the corresponding DVR number is matched, the remote operation is valid.


【Video Standard】 PAL or NTSC.

【Auto Logout】 Set the latency time in 0-60. 0 means no latency time.

【DST】 Choose the summer time option and pop the dialog box as followed.

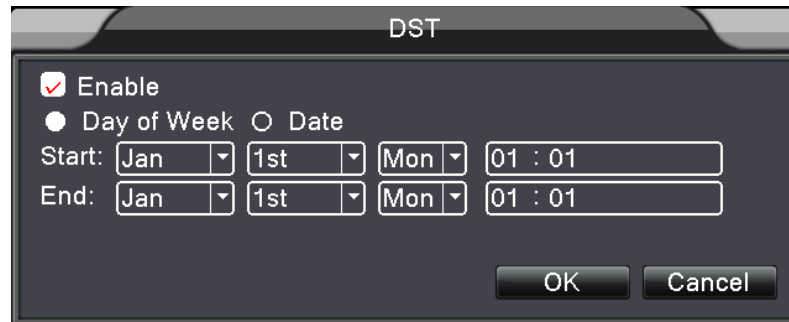

Picture 4.14 DST (week)

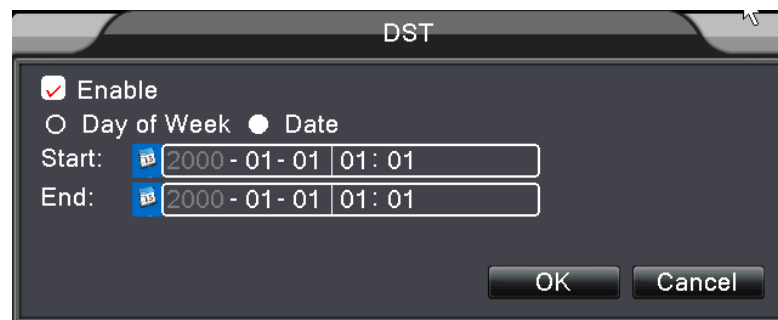

Picture 4.15 DST (date)

#### 4.4.2 Encode setup

Set the video/audio code parameter: video file, remote monitoring and so on. Set every independent channel's coding parameter in the left part, and set the combine encode parameter in the right part.

Note: Combine encode introduces video compression technique which combines and compresses multi-channel's video to a special channel. Applying for multi-channel playback simultaneously, Dial-up multi-channel real-time monitor, mobile monitor and so on.



Picture 4.16 Encode setup

**【Channel】** Choose the channel number.

**【Compression】** Standard H.264 main profile.

**【Resolution】** Resolution type:D1/ HD1/CIF / QCIF.

**【Frame Rate】** P:1 frame/s~25 frame/s; N: 1 frame/s~30 frame/s

**【Bit Rate Type】**You can choose limited code stream or variable code stream. When you choose the variable code stream there are six image quality options.

**【Bit Rate】** Set the code stream value to modify the image quality. The larger code stream value the better image quality.

D1 (1000~1500kbps) ,CIF (384~1500kbps) , QCIF(64~512kbps)


**【Video/Audio】** When the icons are all in reverse displayed, the video file is video and audio multiplex stream.

#### **Extra stream Enable**

**【Extra stream Enable】** When the icons are all in reverse displayed, opening extra stream functions.

**【Channel】** At first,pls choose channel number,and enable video/audio

### 4.4.3 Network setup

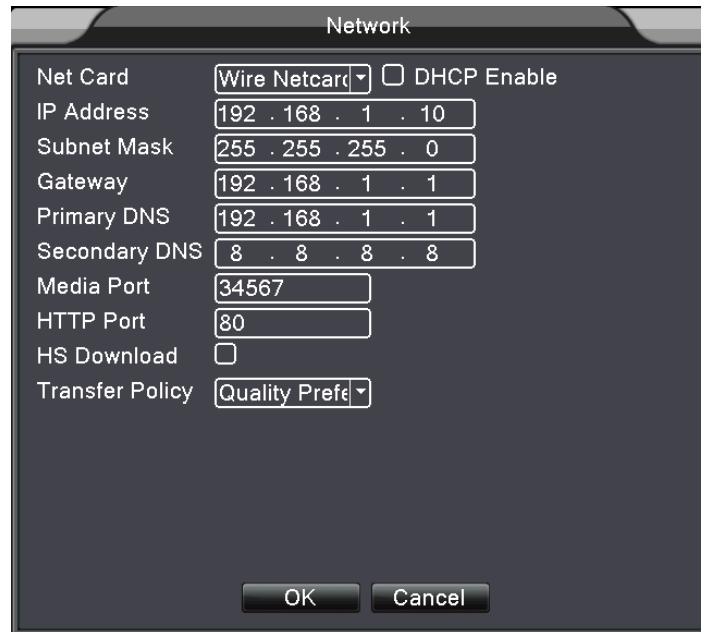

Picture4.17 Network

**【Net Card】** You can choose cable network card or wireless network card.

**【DHCP Enable】** Obtain IP address automatically(not suggested)

**Note:** DHCP server is preinstalled.

**【IP address】** Set the IP address. Default: 192.168.1.10.

**【Subnet mask】** Set the subnet mask code. Default: 255.255.255.0.

**【Gateway】** Set the default gateway. Default: 192.168.1.1.

**【DNS setup】** Domain Name Server. It translates the domain name into IP address. The IP address is offered by network provider. The address must be set and reboot then it works.

**【TCP port】** Default: 34567.


**【HTTP port】** Default: 80.

**【HS Download】**

**【Transfer Policy】** There are three strategies: self-adaption, image quality precedence and fluency precedence. The code stream will adjust according to the setup. Self-adaption is the tradeoff between the image quality precedence and fluency precedence. Fluency precedence and self-adaption are valid only when the assistant code stream is turned on. Otherwise image quality precedence is valid.


#### 4.4.4 NetService

Choose the network service option and click the set button to configure the advanced network functions or double click the service button to configure the parameters.

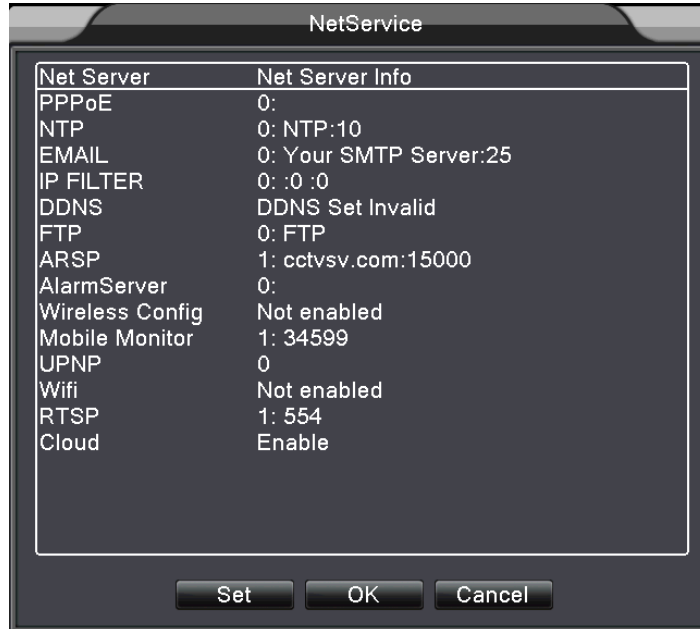

Picture 4.18 NetService

#### 【PPPoE setup】

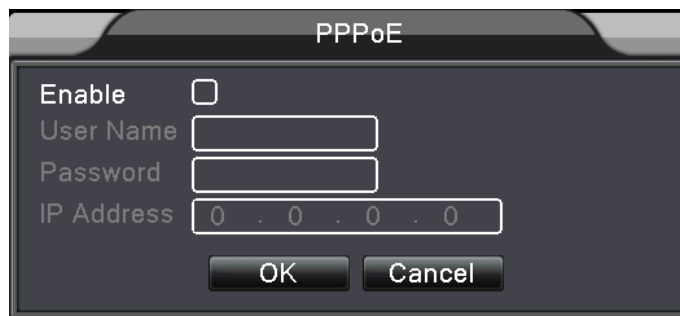

Picture4.19 PPPOE

Input the user name and password that ISP (Internet service provider) provides. After saving it reboot up your system. Then the DVR will build a network connection based on PPPoE. The IP address will change into dynamic IP address after above operation is well done.

Operation: After PPPoE dialing successfully look up the IP address in the [IP address] and obtain the current IP address. Then use this IP address to visit the DVR through user port.

#### 【NTP setup】



Picture 4.20 NTP

The NTP server must be installed in the PC.

**Host computer IP:** Input the IP address installed NTP server.


**Port:** Default: 123. You can set the port according to NTP server.

**Time zone:** London GMT+0 Berlin GMT +1 Cairo GMT +2 Moscow GMT +3 New Delhi GMT +5  
 Bangkok GMT +7 Hongkong Beijing GMT +8 Tokyo GMT +9 Sydney GMT +10 Hawaii GMT-10  
 Alaska GMT-9 Pacific time GMT-8 American mountain time GMT-7 American mid time GMT-6  
 American eastern time GMT-5 Atlantic time GMT-4 Brazil GMT-3 Atlantic mid time GMT-2.

**Update Period:** The same with the NTP server check interval. Default: 10minutes.

**【EMAIL setup】**

If the alarm is turned on or the alarm linkage photos are taken, send an email about the alarm information and the photos to appointed address.

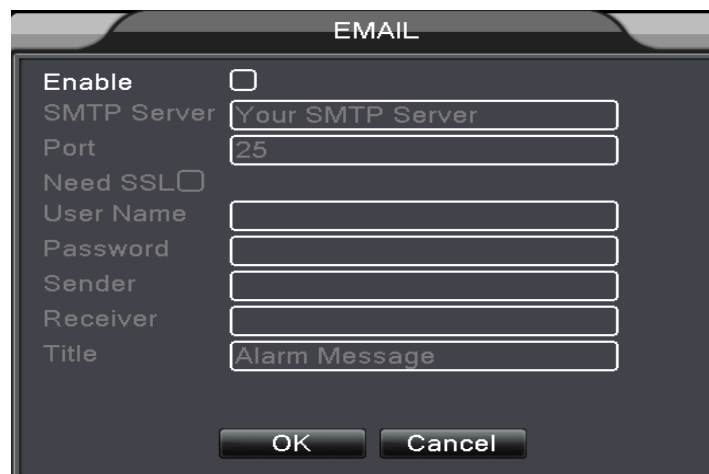

Picture 4.21 EMAIL

**SMTP server:** Email server address. It could be an IP address or domain name. Domain name can be translated only it is the correct DNS configuration.

**Port:** Email server port number.

**SSL:**Decide whether using Secure Socket Layer protocol to login.

**User Name:**Apply the email server user name.

**Password:**Input the password corresponding to the user.

**Sender:**Set the email sender address.

**Receiver:**Send the email to appointed receivers when the alarm is turned on. You can set three receivers at most.

**Title:**You can set as you wish.


### 【IP Filter setup】

When choosing the white list, only the listed IP address can connect the DVR. The 64 IP addressed are supportive in the list.

When choosing the black list, the listed IP address can not connect the DVR. The 64 IP addressed are supportive in the list.

You can delete the set IP address by √ in the options.

**Note:** When the same IP address is in the white and black list at the same time, the black list precedence is higher.

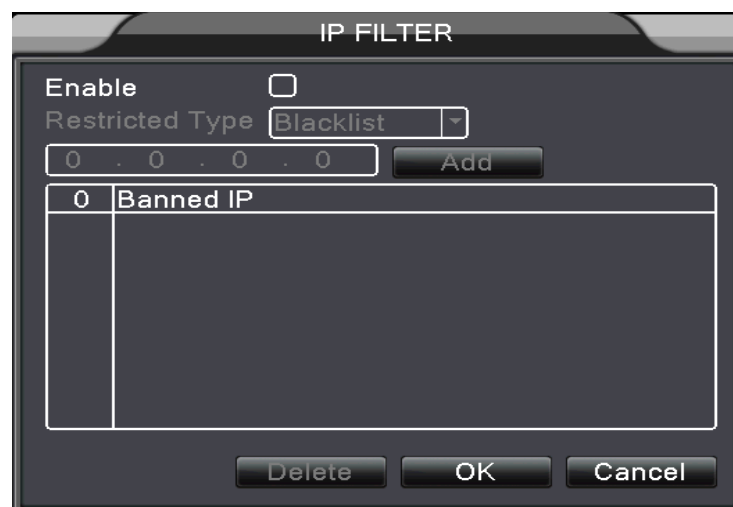

Picture 4.22 IP IP FILTER

### 【DDNS】

It is the abbreviation of dynamic domain name server.


**Local domain name:** Provide the domain name registered by DDNS.

**User name:** Provide the account registered by DDNS.

**Password:** Provide the password registered by DDNS.

When the DDNS is successfully configured and start, you can connect the domain name in the IE address column to visit.

**Note:** The DNS setup must be configured correctly in the network setup.

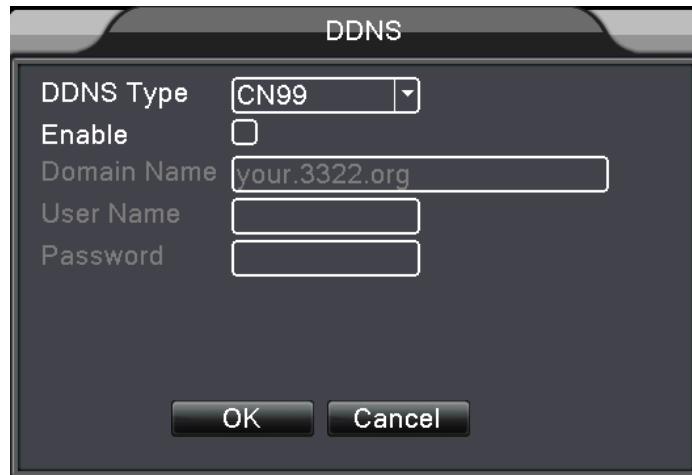

Picture 4.23 DDNS setup

**【FTP setup】** FTP is available only when alarm happens, or alarm activates record and snapshot, it will upload related record and snapshot pictures to FTP server.



Picture 4.24 FTP setup

**【Enable】** Click Enable, then all settings will be available

**【Server IP】** IP address for FTP server

**【Port】** Domain Port of FTP, default 21

**【User Name】** User name of FTP


**【Password】** Password of user

**【Max File Length】** Max length for upload files at every packed, default 128M

**【DirName】** Directory of uploading files

**Note: At Premise of the user has been allowed to upload files to FTP server**

【Wireless Config】 ADSL through 3G net card,use CMS to visit and config the device

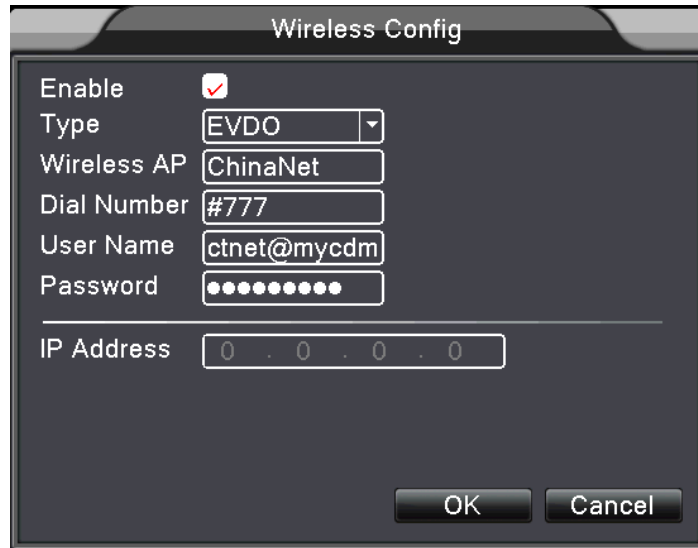

Picture 4.25 Wireless Config

【Enable】 Choose Enable to make all settings available

【Type】 Dial type,default AUTO

【Wireless AP】 3G access point

【Dial Number】 3G Dial Number


【User Name】 User name of 3G

【Password】 Password of dial user

【IP Address】 IP address,got from dial

#### 【Mobile Monitor Setup】

To visit the device by mobile,pls make a router mapping of this port and use CMS to monitor and operate it by protocol.

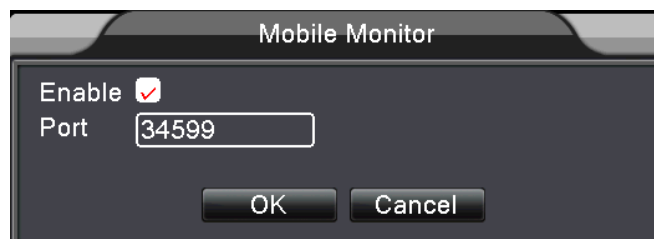


Picture 4.26 Mobile Monitor Setup

【Enable】 Select it to make sure abnormal function workable

【Port】 It's a port of mobile monitoring which you need to make a router mapping of if want to visit it

by mobile

**【UPNP】** UPNP protocol can auto port forwarding on router,make sure UPNP is running on router before use it.

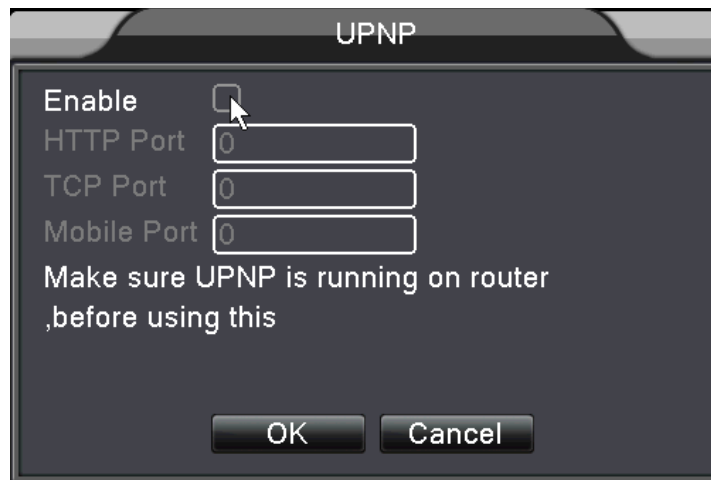

Picture 4.27

**【Enable】** Choose Enable to make sure all UPNP settings available

**【HTTP】** Router will automatically distribute HTTP port for the device,when IE viewing,it need this port(eg. 60.12.9.26:66)

**【TCP】** Router will automatically distribute TCP port for the device,when monitoring via CMS,it need this port.


**【MobilePort】** Router will automatically distribute Mobile Port for the device,when mobile monitor,it need this port.

#### 4.4.5 GUI Display

Configure the video output parameters including the front output mode and code output mode.

**Front output:** In the local preview mode include: channel title, time display, channel title, record status, alarm status,bitrate info, transparency and region cover.

**Code output:** In the network surveillance and video file mode include: channel title, time display, channel title, record status, alarm status,bitrate info, transparency and region cover.

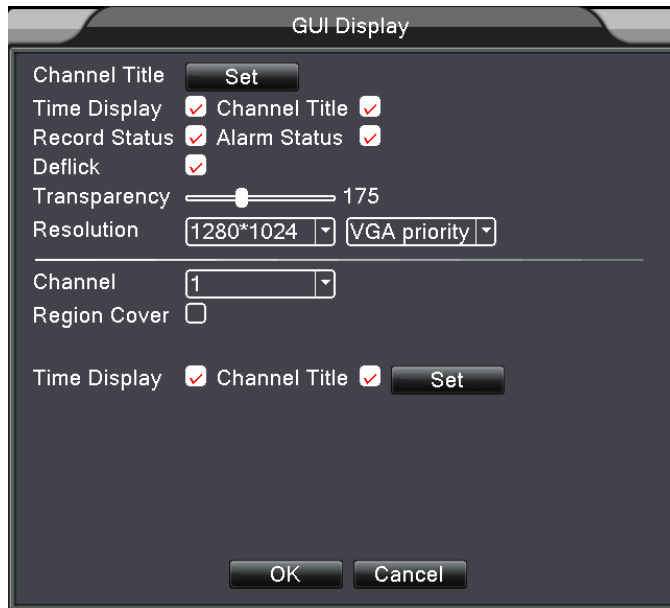

Picture 4.28 GUI Display

**【Channel Title】** Click the channel name modify button and enter the channel name menu. Modify the channel name. The 16 Chinese characters and 25 letters are supportive.

**【Time Display】** means the selective state. Display the system data and time in the surveillance window.

**【Channel Title】** means the selective state. Display the system channel number in the surveillance window.

**【Record Status】** means the selective state. Display the system recording status in the surveillance window.

**【Alarm Status】** means the selective state. Display the system alarm status in the surveillance window.

**【Bitrate info】** means the selective state. The ninth window displays the code stream information in the nine-window preview status.

**【Transparency】** Choose the background image transparency. The range is 128~255.

**【Resolution】** set display resolution.

**【Channel】** Choose the set code output channel number.

**【Region Cover】** means the selective state. Click the cover area button and enter the corresponding channel window. You can cover the arbitrary using mouse. (Black region is for output)

**【Time display】** and **【Channel Title】**

## 4.4.6 PTZ setup

PTZ Device		RS485 Device	
Channel	1	NONE	
Protocol	PEL COD	NONE	
Address	1	1	
Baudrate	9600	9600	
Data Bits	8	8	
Stop Bits	1	1	
Parity	None	None	

Picture 4.29 PTZ setup

**【Channel】** Choose the dome camera input channel.

**【Protocol】** Choose the corresponding dome protocol. (PEL COD as an example)

**【Address】** Set as the corresponding dome address. Default: 1. (Note: The address must be consistent with the dome address.)


**【Baudrate】** Choose the corresponding dome baud rate length. You can control the PTZ and vidicon. Default: 115200.

**【Data bits】** Include 5-8 options. Default: 8.

**【Stop bits】** Include 2 options. Default: 1.

**【Parity】** Include odd check, even check, sign check, blank check. Default: void.

## 4.4.7 RS232 setup

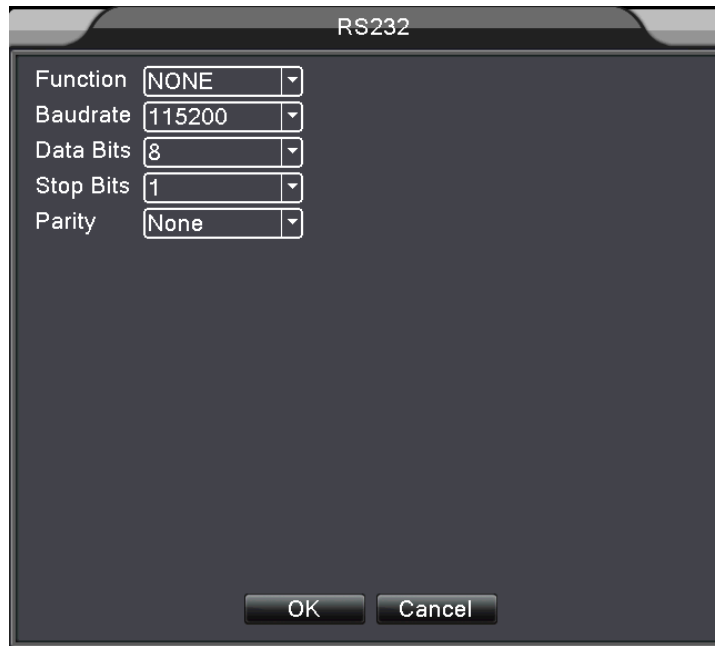

Picture 4.30 RS232 setup

【Serial Port Function】 Common serial port is used to debug and update program or set up specific serial port.

【Baud rate】 Choose the corresponding baud rate length.


【Data bits】 Include 5-8 options.

【Stop bits】 Include 2 options.

【Parity】 Include odd, even, mark, space.

#### 4.4.8 Tour setup

Set the patrol display. ■ means that the tour mode is turned on. You can choose the single window, four windows, nine windows, sixteen windows patrol display or single display.

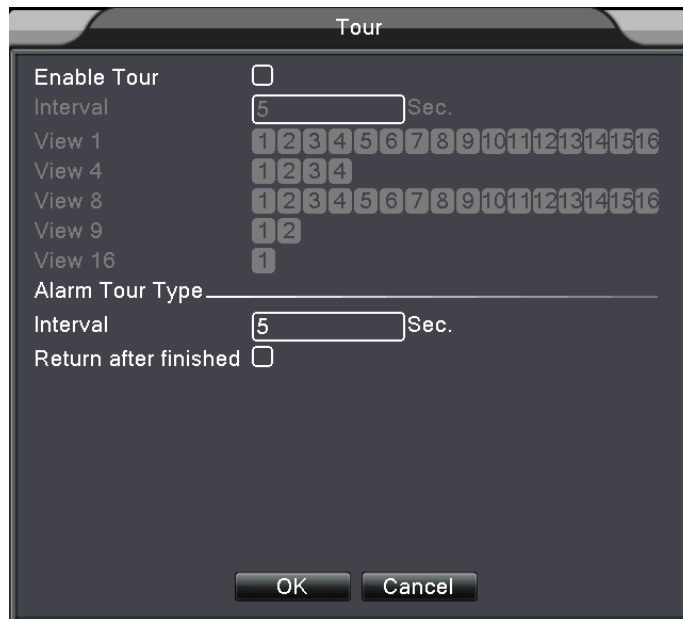

Picture 4.31 tour setup

【interval】 Set the patrol switch interval. The set range is 5-120 seconds.

**Note:**  /  means turn off/on the patrol.

## 4.5 Advanced

### 4.5.1 HDD Manage

Configure and manage the hard disk. The menu displays current hard disk information: hard disk number, input port, type, status and overall capability. The operation include: setup the write-read disk, read-only disk, redundant disk, hard disk format, resume default. Choose the hard disk and click the right function button to execute.

**Note:** Read/Write Disk: The equipment can write or read data.

Read-only Disk: The equipment can read data but can not write data.

Redundant Disk: Double backup the video files in the write-read disk.




Picture4.32 HDD Manage

#### 4.5.2 Account

Manage the user purview.

- Note:**
1. The character length is 8 bytes at most for the following user and user team name. The blank ahead or behind the character string is invalid. The middle blank in the character string is valid. Legal characters include: letter, number, underline, subtraction sign, dot.
  2. There is no limit in the user and user group. You can add or delete the user group according to user definition. The factory setup include: user\admin. You can set the team as you wish. The user can appoint the purview in the group.
  3. The user management include: group/ user. The group and user name can not be the same. Each user only belongs to one group.

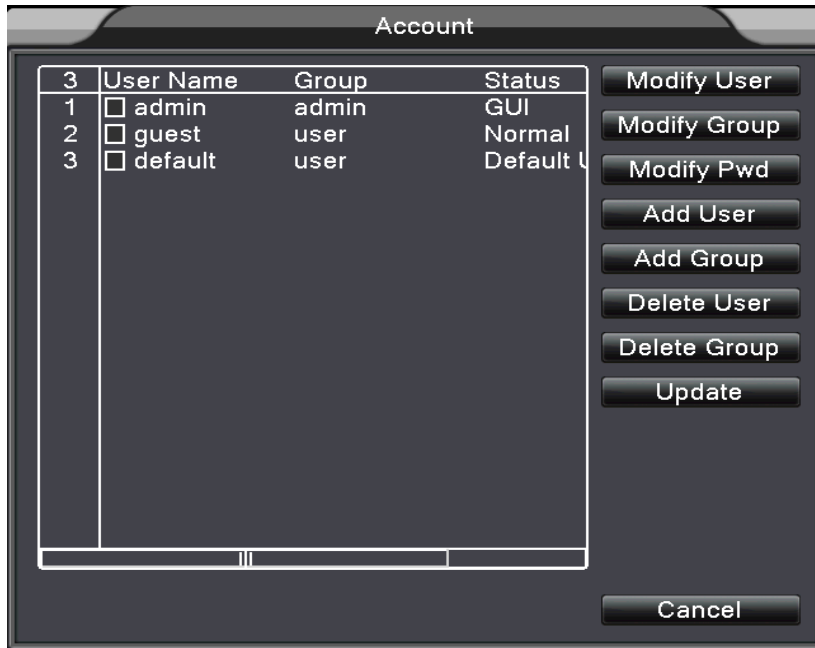


Picture 4.33 Account

**【Modify User】** Modify the existed user attribute.

**【Modify Group】** Modify the existed team attribute.

**【Modify Password】** Modify the user password. You can set 1-6 bit password. The blank ahead or behind the char string is invalid. The middle blank in the char string is valid.

Note: The user who possess the user control purview can modify his/her own or other users password

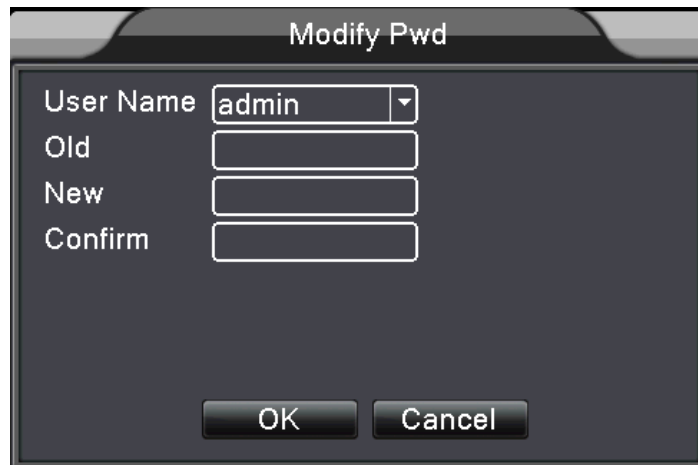


Picture 4.34 Modify Password

**【Add user】** Add a user in the team and set the user purview. Enter the menu interface and input the user name and password. Choose the team and choose whether cover using the user. Cover using means that the account can be used by multiple users at the same time.


Once choose the team the user purview is the subclass of the team.

We recommend that the common user's purview is lower than the advanced user.

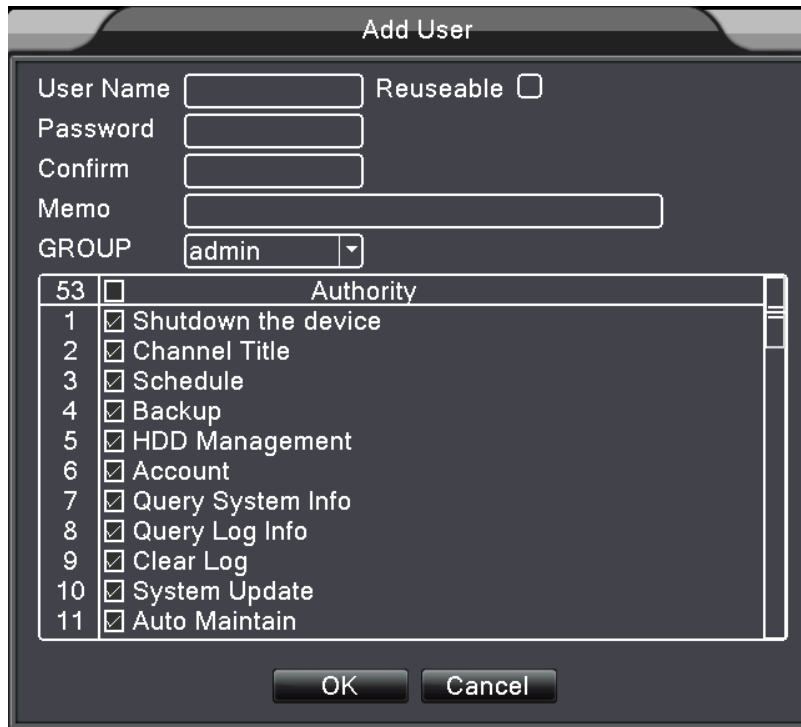

Picture 4.35 add user

**【Add Group】** Add a user team and set the purview. There are 36 different purviews: shut down the equipment, real time surveillance, playback, recording setup, video file backup and so on.

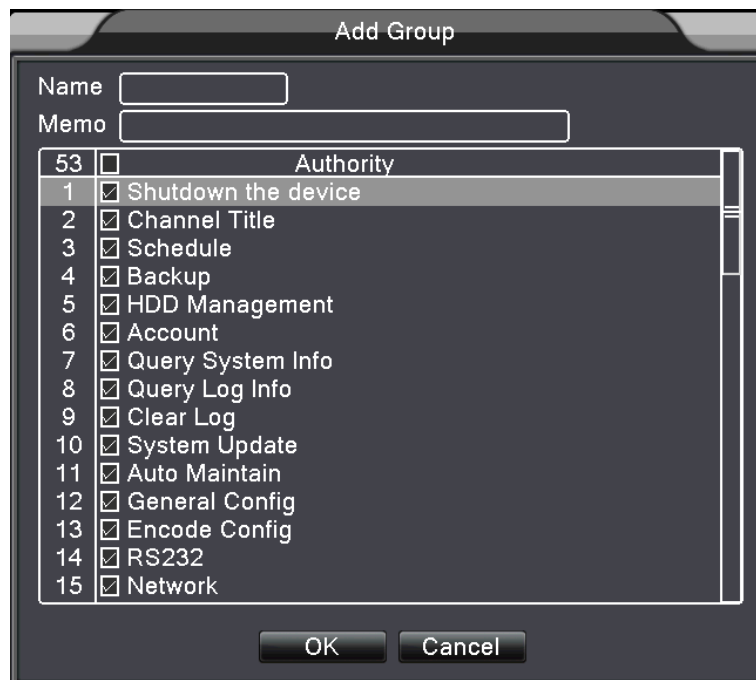

Picture 4.36 Add Group

**【Delete User】** Delete the current user. Choose the user and click delete user button.

**【Delete Group】** Delete the current group. Choose the group and click delete group button.



Picture 4.37 Delete Group

### 4.5.3 Online User

Look up the network user information in the local DVR. You can choose the network user and cut the connection. Then the user is locked until next boot-strap.




Picture 4.38 Online User

### 4.5.4 TV adjust

Refer to chapter 3.5.7 .

#### 4.5.5 Auto Maintain


The user can set the auto reboot time and auto file deleting time limit.

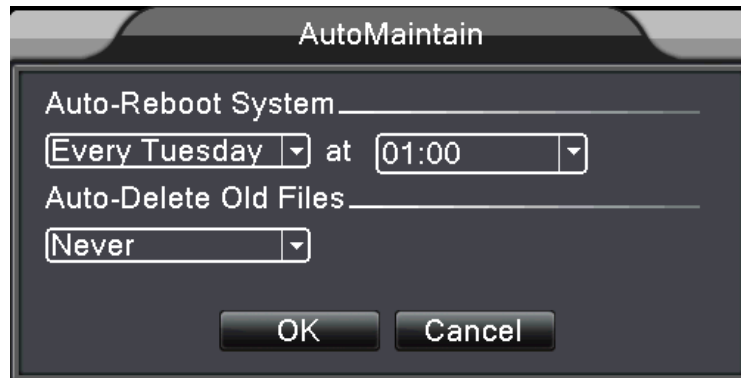

Picture 4.39 Auto maintain


#### 4.5.6 Restore

The system restore to the default setup. You can choose the items according to the menu.

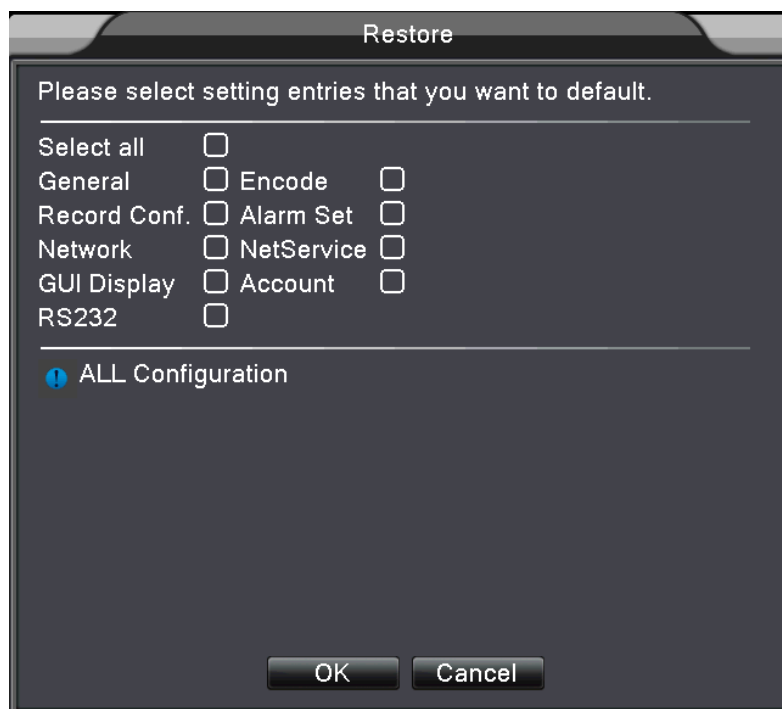

Picture 4.40 Restore

## 4.5.7 Upgrade

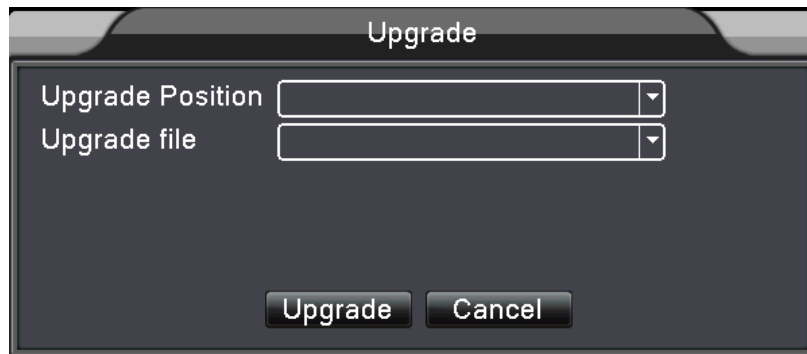


Picture 4.41 Upgrade

**【Upgrade】 choose USB interface.**

**【Upgrade file】 choose the file which needs upgraded.**

## 4.5.8 Device Info

Provide device interface info like audio in, alarm in/out to be conveniently used for user.\

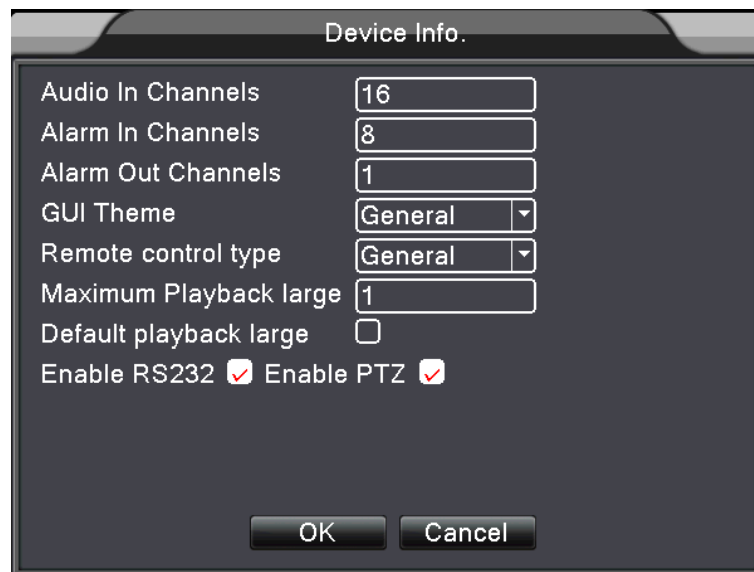


Picture 4.42 Device Info.

## 4.6 Info

### 4.6.1 HDD info

Display the hard disk state: hard disk type, overall capability, residual capability, the recording time and so on.

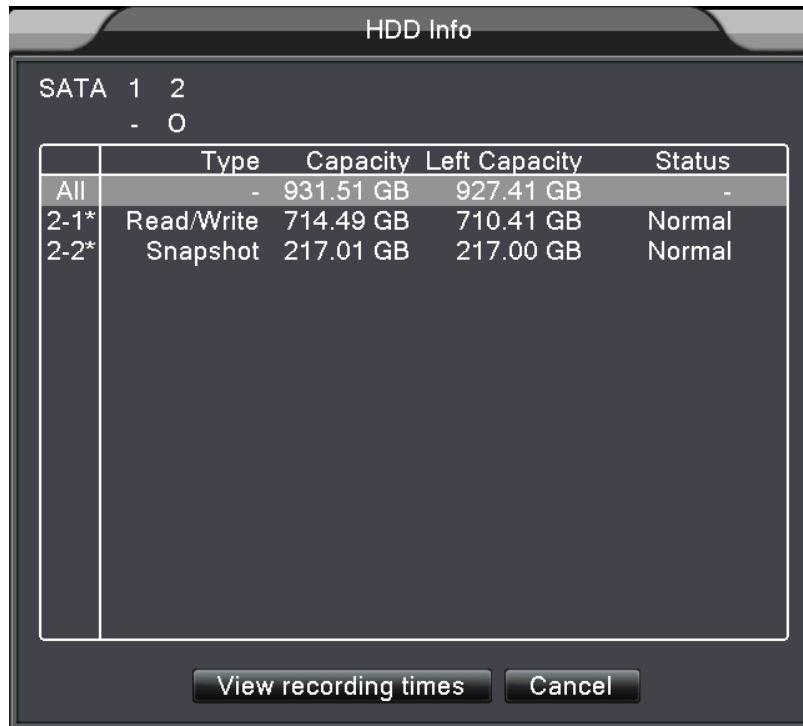

Picture 4.43 HDD Info

**Clue:** ○ means that the hard disk is normal. X means that the hard disk is broken-down. - means that there is no hard disk. If the user need to change the damaged hard disk, you must shut down the DVR and take up all the damaged hard disks, then install a new one.

\* behind serial number means the current working disk such as 1\*. If the corresponding disk is damaged, the information will show "? " .

#### 4.6.2 BPS

Display the code stream (Kb/S) and hard disk capability (MB/H) in real time. It displays as the wave sketch map.

Channel	Kb/S	MB/H
1	1429	576
2	1365	559
3	1408	569
4	1365	551

Picture 4.44 BPS

### 4.6.3 LOG

Look up system log according to the set mode.

**Log information** include: system operation, configuration operation, data management, alarm affair, recording operation, user management, file management and so on. Set the time section to look up and click the look up button. The log information will display as a list. (one page is 128 items) Press **Page up** or **Page down** button to look up and press **delete** button to clear all the log information.


LOG			
Type	All		
Start Time	2012-11-09 00:00:00		Search
End Time	2012-11-10 00:00:00		Next Page
44	Log Time	Type	LOG
1	2012-11-09 08:17:30	Clear Log	
2	2012-11-09 08:22:58	Log In	User admin
3	2012-11-09 08:25:02	Log Out	User admin
4	2012-11-09 08:25:02	Log In	User default
5	2012-11-09 08:25:24	Log Out	User default
6	2012-11-09 08:25:24	Log In	User admin
7	2012-11-09 08:36:12	Log Out	User admin
8	2012-11-09 08:47:14	Log In	User admin
9	2012-11-09 08:50:56	Save Configuration	Motion Dete
10	2012-11-09 08:51:16	Shut Down	2012-11-09
11	2012-11-09 08:51:44	Reboot	2012-11-09
12	2012-11-09 08:51:44	Log In	User default
13	2012-11-09 08:52:03	Log Out	User default

Remove Cancel

Picture4.45 LOG

#### 4.6.4 Version

Display the basic information such as hardware information, software edition, issue data and so on.

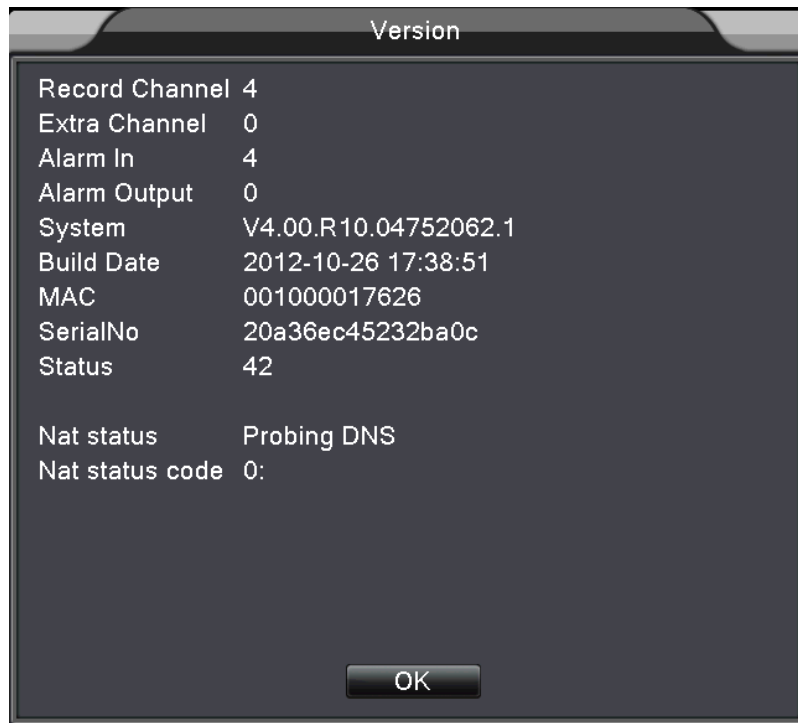

Picture 4.46 Version

#### 4.7 Shut down system

Refer to chapter 3.5.8.

---

## 5 FAQ and maintenance

### 5.1 FAQ

If the problems are not listed, please contact the local service or call the HQ service. We are willing to offer the service.

#### 1、 The DVR can not boot up normally.

Possible reasons are as followed:

- 1 The power supply is not correct.
- 2 Switch power supply line is not in good connection.
- 3 Switch power supply is damaged.
- 4 The program updating is wrong.
- 5 The hard disk is damaged or the hard disk lines are broken.
- 6 The front panel is damaged.
- 7 The main board of the DVR is damaged.

#### 2、 The DVR reboots automatically or stops working after boot up a few minutes.

Possible reasons are as followed:

- 1 The input voltage is not stable or too low.
- 2 The hard disk is damaged or the hard disk lines are broken.
- 3 The power of the switch power supply is low.
- 4 Frontal video signal is not stable.
- 5 Bad heat radiator or too much dust or bad running circumstance for the DVR.
- 6 The hardware of the DVR is damaged.

#### 3、 System can not detect hard disk.

Possible reasons are as followed:

- 1 The hard disk power supply line is not connected.
- 2 The cables of the hard disk are damaged.
- 3 The hard disk is damaged.
- 4 The SATA port of main board is damaged.

#### 4、 There are no video outputs in single channel, multiple channels and all channels.

Possible reasons are as followed:

- 1 The program is not matched. Please update the program.
- 2 The image brightness is all 0. Please restore the default setup.
- 3 There is no video input signal or the signal is too weak.
- 4 The channel protection or the screen protection is set.
- 5 The hardware of the DVR is damaged.

**5、 Real-time image problems such as the image color or the brightness distortion.**

Possible reasons are as followed:

- 1 When using the BNC output, the option between the N mode or PAL mode is wrong and the image becomes black and white.
- 2 The DVR is not matched the monitor impedance.
- 3 The video transmission distance is too far or the loss of the video transmission line is too large.
- 4 The color and brightness setting of the DVR is wrong.

**6、 I can not find the video files in local playback mode.**

Possible reasons are as followed:

- 1 The data line of the hard disk is damaged.
- 2 The hard disk is damaged.
- 3 Update the different program with the origin program files.
- 4 The video files to look up are covered.
- 5 The recording is not on.

**7、 The local video is not clear.**

Possible reasons are as followed:

- 1 The image quality is too bad.
- 2 The reading program is wrong. Reboot up the DVR.
- 3 The data line of the hard disk is damaged.
- 4 The hard disk is damaged.
- 5 The hardware of the DVR is damaged.

**8、 There is no audio signal in the surveillance window.**

Possible reasons are as followed:

- 1 It is not an active tone arm.
- 2 It is not an active sound box.
- 3 The audio lines are damaged.

4 The hardware of the DVR is damaged.

**9、 There is audio signal in the surveillance window but no audio signal in the playback state.**

Possible reasons are as followed:

- 1 Setting issues: the audio option is not chosen.
- 2 The according channel is not connected with the video.

**10、 The time is wrong.**

Possible reasons are as followed:

- 1 Setting is wrong..
- 2 The battery is in bad connection or the voltage is too low.
- 3 The oscillation is damaged.

**11、 The DVR can not control the PTZ.**

Possible reasons are as followed:

- 1 There is something wrong with the frontal PTZ.
- 2 The setting, connection or the installation of the PTZ decoder is not correct.
- 3 The connections are not correct.
- 4 The PTZ setting of the DVR is not correct.
- 5 The protocols of the PTZ decoder and the DVR are not matched.
- 6 The address of the PTZ decoder and the DVR are not matched.
- 7 When multiple decoders are connected, the far port of the PTZ decoder line A(B) must connect a  $120\Omega$  resistance to reduce the reflection otherwise the PTZ control is not stable.
- 8 The distance is too far.

**12、 The motion detect is not working,**

Possible reasons are as followed:

- 1 The time range set is not correct.
- 2 The motion detect area set is not correct.
- 3 The sensitivity is too low.
- 4 Limited by some hardware edition.

**13、 I can not login via web or CMS.**

Possible reasons are as followed:

- 1 The system is windows 98 or win me. We recommend updating to windows 2000sp4 or

higher Version or installing the software for low edition.

- 2 ActiveX is hold back.
- 3 The version is not exceeded dx8.1. Update the display card driver.
- 4 Network connection failure.
- 5 Network setting issues.
- 6 Invalid password or user name.
- 7 The CMS is not matched the DVR program version.

**14、 The image is not clear or there is no image in network preview state or video file playback state.**

Possible reasons are as followed:

- 1 Network is not stable.
- 2 The user machine is resource limited.
- 3 Choose the play-in-team mode in the network setup of DVR.
- 4 The region shelter or channel protection is set.
- 5 The user has no surveillance purview.
- 6 The real-time image of the hard disk recording machine itself is not clear.

**15、 Network connection is not stable.**

Possible reasons are as followed:

- 1 Network is not stable.
- 2 IP address is conflicted.
- 3 MAC address is conflicted.
- 4 The net card of the DVR is bad.

**16、 There is something wrong with the USB backup or writing a CD.**

Possible reasons are as followed:

- 1 The rewritable machine and the hard disk are shared the same data lines.
- 2 The data is too much. Please stop recording and backup.
- 3 The data exceeds the backup storage.
- 4 The backup equipment is not compatible.
- 5 The backup equipment is damaged.

**17、 The keyboard can not control the DVR.**

Possible reasons are as followed:

- 1 The serial port of the DVR is not set correctly.

- 2 The address is not correct.
- 3 When multiple transformers are connected, the power supply is not large enough. Please give each transformer individual power supply.
- 4 The distance is too far.

**18、 Alarm can not be recessional.**

Possible reasons are as followed:

- 1 The setting of the alarm is not correct.
- 2 The alarm output is turned on manually.
- 3 The input machine is damaged or the connections are not correct.
- 4 There are some problems for specific program edition, Please update the program.

**19、 Alarm is not working.**

Possible reasons are as followed:

- 1 The setting of the alarm is not correct.
- 2 The connection of the alarm is not correct.
- 3 The alarm input signal is not correct.
- 4 A alarm is connected with two loops synchronously.

**20、 The remote controller is not working,**

Possible reasons are as followed:

- 1 The remote control address is not correct.
- 2 The remote control distance is too far or the angle is too large.
- 3 The battery is used up.
- 4 The remote controller or the front panel of the recording machine is damaged.

**21、 The storage time is not enough.**

Possible reasons are as followed:

- 1 Front vidicon quality is bad. The lens is too dirty. The vidicon is in backlighting installation.
- 2 The hard disk capability is not enough.
- 3 The hard disk is damaged.

**22、 The downloading files can not play.**

Possible reasons are as followed:

- 1 There is no media player.
- 2 There is no DX8.1 software or higher edition.
- 3 There is no DivX503Bundle.exe file to play AVI video files.

- 4 The DivX503Bundle.exe and ffdshow-2004 1012 .exe files must be installed in the windows xp system.

**23、 I can not remember the advanced code or network code in the local menu operation.**


Please contact the local service or call the HQ service. We will offer the service according the machine type and the program edition.

## **5.2 Maintenance**

- 1 Please brush printed circuit boards, connectors, fans, machine box and so on regularly.
- 2 Please keep the grounding well done to prevent the video or audio signal interfered and the DVR from static or inductive electricity.
- 3 Do not pull out the video signal line or RS-232 port or RS-485 port with the power on.
- 4 Do not use the TV in the local video output port(VOUT) of DVR. It will damage the video output circuit easily.
- 5 Do not turn off the switch directly. Please use the turn-off function in the menu or press the turn-off button in the panel (3 seconds or longer) to protect the hard disk.
- 6 Please keep the DVR away from heat resource.
- 7 Please keep the DVR ventilated for better heat radiator.

Please check the system and maintain regularly.

## Appendix 1. Remote controller operation

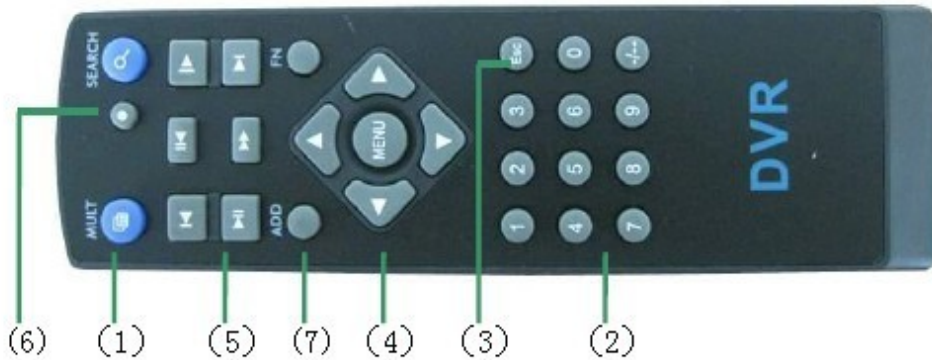

Serial number	ame	Function
1	Multi-window button	Same function as Multi-window button in the front panel
2	Numeric button	Code input/number input/channel switch
3	【Esc】	Same function as 【Esc】 button in the front panel
4	Direction button	Same function as direction button in the front panel
5	Record control	Control the record
6	Record mode	Same function as “Record mode”
7	ADD	Input the number of DVR to control it

---

## Appendix 2. Mouse operation

**\*Take right hand as an example**

The mouse in USB connection is supported.

Operation	Function
Double left click	Double click one item in the file list to playback the video
	Double click the playback video to zoom in or out the screen
	Double click the channel to make it full screen display double click again to resume the multi-window display
Left click	Choose the according function in the menu
Right click	Pop desktop shortcut menu in preview state
	Current shortcut menu in the menu
Press middle button	Add or subtract number in the number setting
	Switch the items in the combo box
	Page up or down in the list
Move mouse	Choose the widget or move the item in the widget
Drag mouse	Set the motion detect area
	Set the cover area

---

## Appendix 3.Hard disk capability calculation

Make sure the hard disk installed to the DVR for the first time. Pay attention to the IDE hard disk lines connection.

### 1、 Hard disk capability

There is no limit for recording machine. We recommend 120G~250G size to keep better stability.

### 2、 Overall capability option

The hard disk capability formula is:

Overall capability (M) =channel number\*time (hour) \*capability in an hour (M/hour)

The recording time formula is:

Recording time (hour) =  $\frac{\text{overall capability (M)}}{\text{Capability in an hour (M/hour) *channel number}}$

Capability in an hour (M/hour) \*channel number

The DVR introduces the H.264 compression technology. Its dynamic range is very large so the hard disk capability calculation is based on the estimation values of each channel creating files in an hour.

### **Example:**

For one piece 500G HDD,real time CIF for recording,it will keep recording for about 25 days.HDD spaces per channel is 200M/H;if 4channels real time CIF at 24hours recording uninterrupted,it can last: $500G/(200M/H*24H*4ch)=26$  days

## Appendix 4. Technique parameters

	Type	4ch	8ch	16ch
System	Main processor	High performance embedded microprocessor		
	Operation system	Embedded LINUX operation system		
	System resource	synchronous multi-channel recording, synchronous multi-channel sub-code stream, synchronous multi-channel playback, synchronous network operation		
Interface	Operation interface	16 bit true color graphical menu interface, mouse operation supportive		
	display	1/4image display	1/4/8/9 image display	1/4/8/9/16 image display
Video	Video standard	PAL 625line,50 f/s;NTSC 525 line,60 f/s		
	Surveillance image quality	PAL, D1(704x576);NTSC, D1(704x480)		
	Playback image quality	PAL,D1(704x576);NTSC, D1(704*480)		
	Video compression	H.264 mp		
	Video control	6 options		
	Recording speed	100/120fps (D1)	200/240fps(D1)	400/480fps D1
	Motion detect	396(22x18) detection areas, multiple sensitivity		
Audio	Audio compression	G711A		
	Bidirectional Talk	Support		
Record	Recording mode	manual >alarm>motion detect>timing		
And	Playback	Any channels playback, multiple channels playback		
Playback	Search mode	Time searching, calendar searching, affair searching, channel		

		searching, information searching		
Storage And backup	Space Occupation	Audio: 28.8MB/H Video:25~450MB/H		
	Recording storage	Hard disk, network		
	Backup mode	Network, USB flash,USB movable HDD,USB/inside DVD-RW		
Port	Video input	4 BNC	8 BNC	16 BNC
	Video output	2 BNC, 1 VGA		
	Audio input	4 RCA	8 RCA	16 RCA
	Audio output	1 RCA		
	Alarm input	4ch	8ch	16ch
	Alarm output	4channel		
	Network port	RJ45 10M/100M/1000M		
	PTZ control port	1 RS485,1 RS232		
	USB port	2* USB2.0 ports		
	Hard disk port	4 SATA port		
Other	Power supply	12V / 7A,standard ATX power		
	Power consumption	<15W (without hard disk)		
	Working temperature	0°C~ +55°C		
	Working humidity	10% – 90%		
	Air pressure	86kpa – 106kpa		
	Size	646*425*90mm		
	Weight	7.5kg (without hard disk)		
	Installation	Desktop		